

CAR SECURITY SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS **REV. 00** www.cobra.it X PETROL X5* BMW 01 -DIESEL YEAR MAKE MOD. * Models with original equipment keyless entry system. ALARM/SIREN Position the compact alarms and the sirens on the passenger's side wheelhouse. POSITION Install the modular systems and the modules behind the glove box under the dashboard, **CENTRAL POSITION** passenger's side. **POWER SUPPLY** + 30: connect to the RED wire located in the wiring harness along the steering column. - 31: connect to a ground terminal located behind the left lateral bulkhead, driver's side. **IGNITION WIRE** +15/54: connect to the wire with the function of ignition wire located in the ignition key. DIRECTION INDICATORS Connect to the wires: BLUE/GREEN at the position nr.11 (ant.left), BLUE/BROWN at the position nr.12 (post.right), BLUE/YELLOW at the position nr.14 (lat.left) located in the wiring harness of the 15 way white connector; BLUE/GREEN at the position nr.8 (post.left), BLUE/BROWN at the position nr.6 (ant. right), BLUE/YELLOW at the position nr.14 (lat. right) located in the wiring harness coming out of the 15 way black connector located on the coming out of the lights module, on the right of the passenger's side glove compartment, behind the covering. Refer to the diagram nr.147. **ELECTRIC WINDOWS Negative control signal** The Comfort closing of the windows is obtained timing at 24s. the LIGHT BLUE/RED wire at the position nr.4. **ACTIVAT./DEACTIVATION Connections antitheft/vehicle** CONTROLS Art.3800 Vehicle Position YELLOW/BLACK BLACK Pos. nr. 6, 20 way black connector. GREY/BLACK BLUE Pos. nr.14, 20 way black connector. VIOLET LIGHT BLUE/RED Pos. nr. 4, 12 way black (white) connector. Pos. nr. 3, 12 way black (white)connector. ORANGE WHITE7BLACK VIOLET/WHITE ground car body **ORANGE/WHITE** positive supply in the fuse box. The 20 way black connector is located in the central locking unit placed behind the passenger's side glove compartment. The 12 way black (white) connector is located on the coming out of the buttons controls inside the driver's side door. Refer to C diagram in the dedicated installations manual, inside the kit of the antitheft. **IMMOBILISATION POINT** Fuel pump Cut the 1,5 mm² GREEN/BLACK wire located in the wiring harness coming out of the fuse marked F14, in the fuse box placed under the passenger's side dashboard. +50: cut the 3 mm² BLACK/YELLOW wire located in the wiring harness coming out of the **STARTER** connector of the ignition key. Install an additional switch on the front headlamp support plate, driver's side. **BONNET SWITCH** DOORS AND BOOT Connect to the RED/BLUE wire, at the position nr. 20, located in the wiring harness coming out of the 20 way black connector on the coming out of the central locking unit placed behind the **SWITCHES** glove compartment, passenger's side. Attention: as the polarity of the doors is at a positive control signal, it is necessary to invert the signal by using a supplementary relay.

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

bmx501gbbt.doc

