

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

X PETROL X 5* BMWDIESEL MAKE MOD.

ALARM/SIREN **POSITION**

Position the compact alarms and the sirens on the passenger's side wheelhouse. Pass the cables using the original fairlead located in the driver's side wheelhouse.

CENTRAL UNIT POSITION

Position the modular sistems and the modules under the dashboard, passenger's side.

POWER SUPPLY

+30: connect to the RED wire located in the wiring harness along the steering column.

-31: connect with a cable terminal behind the driver's side bulkhead.

IGNITION WIRE

+15/54: connect to the ignition wire located in the ignition key.

DIRECTION INDICATORS

Connect to the wires: BLUE/GREEN at the position nr.11, BLUE/BROWN at the position nr.12, BLUE/YELLOW at the position nr.14, in the 15 way white connector; BLUE/GREEN at the position nr.8, BLUE/BROWN at the position nr.6, BLUE/YELLOW at the position nr.14, in the 15 way black connector coming out of the lights module on the right of the passenger's glove compartment, behind the covering.

Refer to the fitting diagram nr.147.

ELECTRIC WINDOWS

Negative control signal

To make the comfort locking of the windows it is enough to give a a 24s. temporized signalò to the LIGHT BLUE/RED wire, at the position nr.4.

Position

ACTIVAT./DEACTIVATION **CONTROLS**

Connections antitheft/vehicle

A11.3000	VEITICIE	Position
YELLOW/BLACK	BLACK	Pos. nr. 6 in the 20 way black connector
GREY/BLACK	BLUE	Pos. nr.14 in the 20 way black connector
VIOLET	Ground	Car body
ORANGE	Ground	Car body

VIOLET/WHITE Ground Car body ORANGE/WHITE Car body ground

Vahicla

The 20 way black connector is located in the central locking unit behind the passenger's side

glove compartment.

Verify the WHITE/BLACK

Note: Before programming the signals of activation/deactivation it is necessary to cut the WHITE/BLACK wire in the wiring harness coming out of the driver's side door.

IMMOBILISATION POINT

Fuel pump

V 44 3800

Cut the 1,5 mm2 GREEN/BLACK wire located in the wiring harness coming out of the fuse marked F14, in the fuse box, placed under the passenger's side dashboard.

STARTER

+50: Cut the 3 mm2 BLACK/YELLOW wire located in the wiring harness coming out of the

connector of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS AND BOOT SWITCH

Connect to the RED/BLUE wire at the position nr. 20, in the wiring harness coming out of the 20 way black connector coming out of the central locking unit, behind the passenger's side

Attention: As the polarity is with positive control signal, it is necessary to invert the signal with an additional relay.

^{*} Models with original equipment keyless entry system.



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM NR.147

Diagram to connect the direction indicators with separated lines on **BMW X5**

