



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **CITROEN** MOD. **XANTIA\*** YEAR. **01** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, passenger's side, or near the condenser of the air conditioner.																					
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.																					
<b>POWER SUPPLY</b>	<p>+ <b>30</b>: connect to the big wire located on the coming out of the 40A fuse placed in the box of the connections, behind the battery.: at the entrance of the fuse box.</p> <p>- <b>31</b>: connect with a cable terminal directly to the car body.</p>																					
<b>IGNITION WIRE</b>	+ <b>15/54</b> : connect to the 1 mm <sup>2</sup> GREEN wire located in the wiring harness coming out of the green relay placed in the box containing the motor operating central, in the engine compartment.																					
<b>DIRECTION INDICATORS</b>	Connect to the wires marked nr. 233 and nr. 234 located in the wiring harness coming out of the 9 way black connector, directly on the way off of the lights switch.																					
<b>ELECTRIC WINDOWS</b>	<p><b>Positive control signal</b></p> <p><b>Front window, driver's side:</b> cut the wires nr. 6001 and nr. 6011 located in the wiring harness of the original push button.</p> <p><b>Front window, passenger's side:</b> cut the wire marked nr. 909 located in the wiring harness of the original push button.</p> <p><b>Rear window, driver's side:</b> cut the wire marked nr. 617 located in the wiring harness of the original push button.</p> <p><b>Rear window, passenger's side:</b> cut the wire marked nr. 612 located in the wiring harness of the original push button.</p>																					
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<p><b>Connections antitheft/vehicle</b></p> <table border="0"> <thead> <tr> <th>38XX</th> <th>Vehicle</th> <th>Position</th> </tr> </thead> <tbody> <tr> <td>GREY/BLACK</td> <td>refer to the position</td> <td>Position nr. 6</td> </tr> <tr> <td>YELLOW/BLACK</td> <td>refer to the position</td> <td>Position nr. 14</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>+30</td> <td>in the fuse box</td> </tr> <tr> <td>ORANGE</td> <td>+30</td> <td>in the fuse box</td> </tr> <tr> <td>VIOLET</td> <td>+30</td> <td>in the fuse box</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>+30</td> <td>in the fuse box</td> </tr> </tbody> </table> <p>These wires are located in the 15 way grey connector placed under the cover of the support of the dorr, driver's side. Refer to the <b>diagram nr. 77</b>.</p>	38XX	Vehicle	Position	GREY/BLACK	refer to the position	Position nr. 6	YELLOW/BLACK	refer to the position	Position nr. 14	VIOLET/WHITE	+30	in the fuse box	ORANGE	+30	in the fuse box	VIOLET	+30	in the fuse box	ORANGE/WHITE	+30	in the fuse box
38XX	Vehicle	Position																				
GREY/BLACK	refer to the position	Position nr. 6																				
YELLOW/BLACK	refer to the position	Position nr. 14																				
VIOLET/WHITE	+30	in the fuse box																				
ORANGE	+30	in the fuse box																				
VIOLET	+30	in the fuse box																				
ORANGE/WHITE	+30	in the fuse box																				
<b>IMMOBILISATION POINT 1</b>	<p><b>Fuel pump</b></p> <p>Cut the GREEN wire marked nr. 121 located in the wiring harness coming out of the fuse F9 placed in the fuse box.</p>																					
<b>IMMOBILISATION POINT 2</b>	<p><b>Positive relay driving</b></p> <p>Cut the YELLOW wire marked nr. 120 located in the wiring harness coming out of the green relay placed in the box containing the motor operating central, in the engine compartment.</p>																					
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support plate, driver's side.																					
<b>DOORS SWITCH</b>	Connect to the wire at the position nr. 4 of the 7 way brown connector coming out of the blue relay located behind the brake lever.																					
<b>BOOT SWITCH</b>	Connect to the wire marked E2 located in the wiring harness coming out of the 30 way connector placed in the sill cover, passenger's side.																					



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS


REV. 00

www.cobra.it

FITTING DIAGRAM N° 77

## CITROEN XANTIA for 3800

- At the positions B2 and B3 there are the wires coming out of the “Plip” receiver and they control the original central doors locking central.
- The VIOLET, ORANGE, ORANGE/WHITE and VIOLET/WHITE wires are all connected at positive (+30).

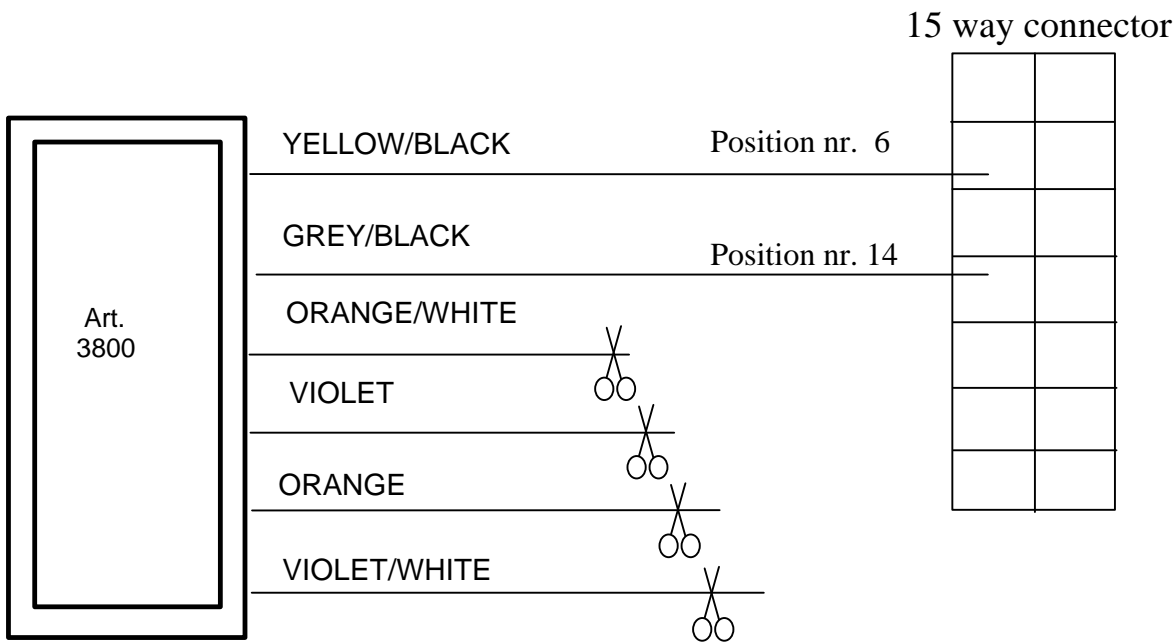

The wires marked with the scissors sign must be cut off near the connector of the antitheft.

The 15 way connector is located on the coming out of the central doors locking unit placed behind the passenger's side glove compartment.