

#### CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

**CITROEN** MAKE

**XSARA** MOD.

**PETROL DIESEL** 

X

**REV. 00** 

ALARM/SIREN **POSITION** 

Position the compact alarms and the sirens at the rear of the wheelhouse, drivers

side

**POWER SUPPLY** 

+ 30: connect to the general supply wiring at the entrance of the fuse box.

- 31: connect directly to the car body.

**IGNITION WIRE** 

+ 15/54: connect to the wire at the position nr.5 of the 15 way connector of the central door locking unit under the dashboard driver's side, on the right of the

steering column.

**DIRECTION INDICATORS** 

Connect to the wires at the positions nr. 10 and nr. 2 of the wiring harness and coming out of the 15 way black connector of the central door locking unit at the

rear of the steering column.

**ELECTRIC WINDOWS** 

**Negative control signal** 

Front window, driver's side:

cut the wire marked nr. 8001 located in the grey connector.

Front window, passenger's side:

cut the wire marked nr. 909 located in the blue connector.

Rear window, driver's side:

cut the wire marked nr. 612 located in the brown connector.

Rear window, passenger's side:

cut the wire nr. 617 located in the white connector.

**CENTRAL DOORS LOCKING** 

For radio-controlled antitheft:

it is suggested to follow diagram nr. 39 to connect the central door locking.

For "plip" antitheft:

connect to the wire at the position nr. 6 for the setting off and to the wire at the position nr. 14 for the connection. These wires are located in the 15 way connector of the central door locking unit under the dashboard driver's side, on

the right of the steering column.

**BONNET SWITCH** 

Install an additional switch on the front headlamp support plate, drivers side.

**DOOR SWITCH** 

Connect to the wire at the position nr. 15 in the 15 way connector of the central door locking unit under the dashboard driver's side, on the right of the steering

column.

**BOOT SWITCH** 

Connect to the wire marked nr. 861 at the position nr. 16 of the 26 way

yellow/black connector and coming out of the central door looking unit.



## **CAR SECURITY**

# SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

**REV. 00** 

www.cobra.it

### **FITTING DIAGRAM N°39**

Diagram to connect compact series/6000 with radio controls alarms


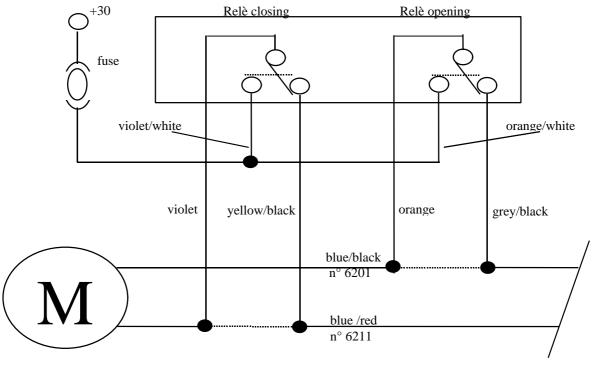


Diagram to connect serial opening/closing doors with radio controls alarms

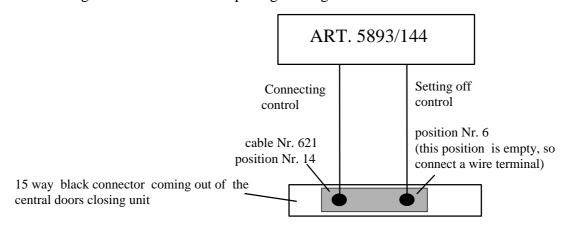

## Connection for ART. 5893:

Yellow/Black 621 pos. Nr.14 Grey/Black wire to the wire in the position Nr.6 Violet = weight Violet/White = positive

#### Connection for ART. 144:

Violet/White at wire 621 position Nr.14 Orange/White at wire in the position Nr. 6 Violet = do not connect Orange = do not connect