



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **CITROEN** MOD. **XSARA \*** YEAR. **00** → PETROL  DIESEL   
**XSARA PICASSO**

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, on the support of the shock absorber.
<b>POWER SUPPLY</b>	+ <b>30</b> : connect to the 4 mm <sup>2</sup> WHITE wire located in a multiway connector at the entrance of the fuse box. - <b>31</b> : connect with a cable terminal to one of the ground terminals located behind the lateral bulkhead, driver's side.
<b>IGNITION WIRE</b>	+ <b>15/54</b> : connect to the wire located at the position nr. 22, of the 26 way blue connector, coming out of the operating central unit.
<b>DIRECTION INDICATORS</b>	Connect to the 1 mm <sup>2</sup> wires at the positions 14 and 15 located in the 16 way black connector coming out of the operating central unit.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, driver's side:</b> cut the PINK wire located at the position nr. 5. <b>Front window, passenger's side:</b> cut the BLUE wire located at the position nr. 5. These positions are in the connectors coming out of the correspondent serial push buttons
<b>ALARM CONTROLS</b>	To connect the antitheft of the 3800 serie it is necessary to refer to the <b>diagram nr. 62</b> .
<b>IMMOBILISATION POINT 1</b>	<b>Inertial switch</b> Cut the 1 mm <sup>2</sup> BLUE wire of the inertial switch located on the left of the engine compartment, above the brakes pump.
<b>IMMOBILISATION POINT 2</b>	<b>Starter</b> Cut the 1,5 mm <sup>2</sup> BLUE wire located in the wiring harness along the steering column, under the dashboard driver's side. It is suggested to install an additional relay.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support plate near the left lateral headlamp.
<b>DOORS SWITCH</b>	Connect to the wires at the positions nr. 6, nr. 11, nr. 12 and nr. 13 of the 26 way blue connector located on the coming out of the operating central unit. Divide the lines by means of 4 diodes.
<b>BOOT SWITCH</b>	Connect to the wire nr. 319 on the coming out of the boot lamp.

