

CAR SECURITY

www.cobra.it							
MAKE	FIAT	MOD.	DUCATO	YEAR	02 →	PETROL DIESEL	П Х

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the wheelhouse, driver's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, on the side

of the steering column.

POWER SUPPLY + 30: connect to the RED wire located in the wiring harness coming out of the

connector of the ignition key.

- 31: connect to one of the ground terminals located under the driver's side

dashboard.

IGNITION WIRE + 15/54: connect to the ORANGE wire located in the wiring harness coming out of

the 8 way white connector, near the lights switch.

DIRECTION INDICATORS Connect to the LIGHT BLUE and LIGHT BLUE/BLACK wires in the 8 way white

connector, near the lights switch.

ELECTRIC WINDOWS Positive control signal

Front window, driver's side:

cut the GREY wire coming out of the driver's side push botton.

Front window, passenger's side:

cut the RED/WHITE wire coming out of the driver's side door.

CENTRAL DOORS LOCKING Motor direct control

Cut the LIGHT BLUE/GREY wire (unlock) and the LIGHT BLUE/WHITE wire (lock) located in the wiring harness coming out of the flying red connector, on the left of the steering column. Make reference to the **section A** of the **diagram nr.131** for the Bridge serie antithefts. For the 3100 and 3900 series refer to the

section B of the diagram nr. 131.

IMMOBILISATION POINT 1 Relay pump ignition wire

Cut the ORANGE wire located in the wiring harness coming out of the connector

of the ignition key.

IMMOBILISATION POINT 2 Gasoil pump

Cut the LIGHTBLUE/WHITE wire located in the wiring harness coming out of the

gasoil pump, in the engine compartment, above the driver's side mudguard.

STARTER +50: Cut the RED/BLACK wire located in the wiring harness coming out of the

ignition key.

BONNET SWITCH Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH Connect to the WHITE/BLACK wire located in the wiring harness coming out of

the 2 way connector, behind the lateral driver's side.

REV. 00



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS


REV. 00

www.cobra.it


FITTING DIAGRAM N° 131

Diagram to make the central locking on FIAT DUCATO

A section

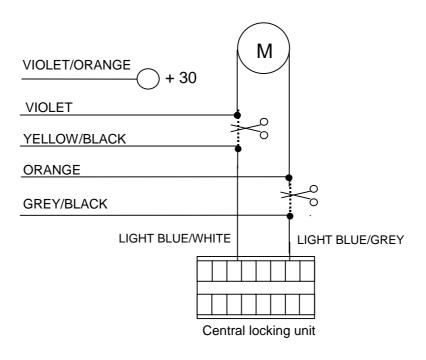

B section

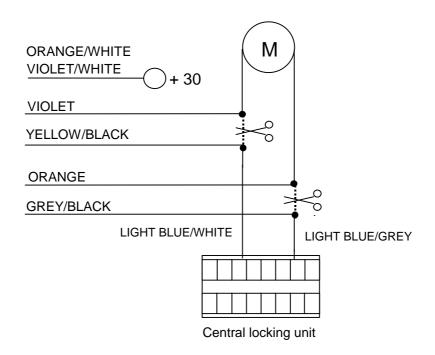

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

fiduc02gbd.doc