



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

MAKE **FIAT** MOD. **SCUDO*** YEAR. **02** [®] PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, passenger's side.
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the YELLOW wire, at the position nr. 1, in the 15 way black connector coming out of the central locking unit located behind the glove compartment, passenger's side. -31: connect to the GREEN wire, at the position nr. 13 of the 15 way black connector coming out of the central locking unit located behind the glove compartment, passenger's side.
IGNITION WIRE	+15/54: connect to the VIOLET wire, at the position nr. 5 of the 15 way black connector coming out of the central locking unit located behind the glove compartment, passenger's side.
DIRECTION INDICATORS	Connect to the WHITE wire, at the position nr.10, and to the YELLOW wire, at the position nr.2, of the 15 way black connector, coming out of the central locking unit located behind the glove compartment, passenger's side.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the WHITE wire located in the wiring harness coming out of the motor of the driver's side door. Front window, passenger's side: cut the PINK wire. Rear window, driver's side: cut the BLUE wire. Rear window, passenger's side: cut the GREEN wire. These wires are in the wiring harness coming out of the driver's side door. Compass rear window, driver's side: cut the PINK wire located in the wiring harness coming out of the relative motor. Compass rear window, passenger's side: cut the PINK wire located in the wiring harness coming out of the relative motor. The above motors are located behind the plastic cover of the supports of the hatchback.
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicle It is suggested to refer to the diagram nr. 151 .
IMMOBILISATION POINT	Gasoil pump Cut the LIGHT BLUE wire, at the position nr. 121, under the BROWN double relay, located in the engine compartment, behind the driver's side headlamp.
STARTER	+ 50: Cut the WHITE wire located in the wiring harness coming out of the black connector of the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support grill, driver's side.
DOORS SWITCH	Connect to the GREY wire, at the position nr. 15, of the 15 way black connector coming out of the central locking unit placed behind the glove compartment, passenger's side.
BOOT SWITCH	Connect to the wire marked 8616, at the position nr. 16, of the 26 way yellow connector, coming out of the central locking unit placed behind the glove compartment, passenger's side.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N°151

Diagram to connect art. 3800 on
FIAT SCUDO year 2002

