



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

MAKE	MOD.	YEAR	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
FIAT	ULYSSE	03 →		
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the side of the cooling bowl. Pass the cables using the oval rubber above the right front shock absorber behind the covering. It is suggested to take off passenger's side glove compartment.			
CENTRAL UNIT POSITION	Position the modular systems and the modules under on the left of the dashboard, driver's side.			
POWER SUPPLY	+30: connect to the 4 mm ² RED wire located in the multiway connector, in the fuse box. -31: connect to the original ground terminal located behind the left lateral bulkhead, driver's side.			
IGNITION WIRE	+15/54: connect to the 1,5 mm ² PINK/RED wire, at the position nr.2, in the wiring harness coming out of the 16 way green connector, in the fuse box.			
DIRECTION INDICATORS	Connect to the WHITE wire at the position nr.13 and to the BROWN wire at the position nr.14, located in the 16 way black connector, in the fuse box.			
ELECTRIC WINDOWS	Positive control signal To close the electric windows it is necessary to operate directly in the wiring harness coming out of each motor inside each door.			
CENTRAL DOORS LOCKING	Direct original door motor control signal For the 7900 serie antithefts refer to the " B " section of the fitting diagram nr.198, for the 3100, 3900 and Cobra Connex series antithefts, refer to the " A " section of the fitting diagram nr.198.			
IMMOBILISATION POINT	Fuel pump Cut the ORANGE wire, at the position nr.16 of the 16 way black connector located in the fuses-holder box on the right of the engine compartment.			
STARTER	+50: Cut the 1,5 mm ² BLUE wire located in the connector coming out of the ignition key.			
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the bonnet bumper rubber.			
DOORS SWITCH	Connect to the BROWN wire, at the position nr.32, coming out of the connector with 40 way white covering, in the BSI central. Note: the control signal is with positive polarity, install a micro-relay.			
BOOT SWITCH	Connect to the LIGHT BLUE wire, at the position nr.16, located in the wiring harness coming out of the 40 way grey connector, in the BSI central.			

FITTING DIAGRAM NR. 198

Diagram to make lock/unlock of the doors
on **FIAT ULYSSE** year 2003

A section

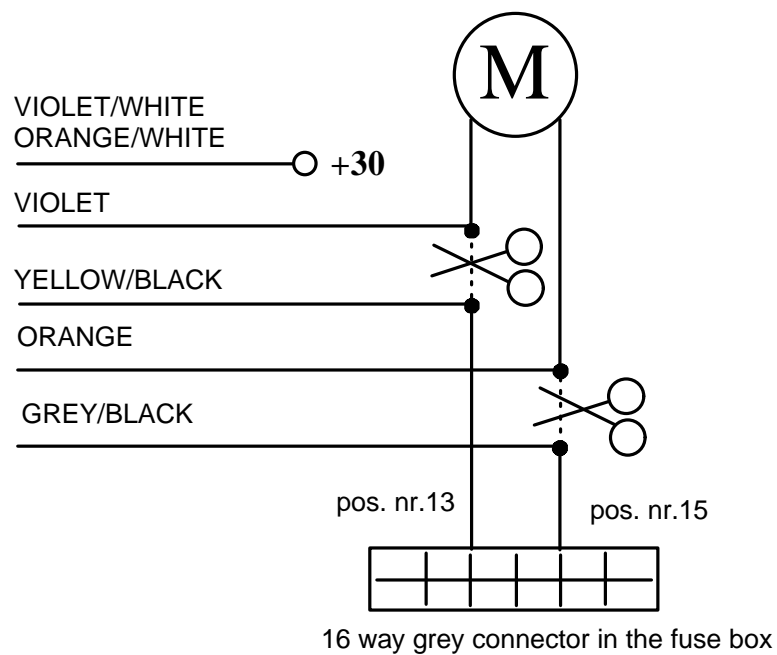

B section

