



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **FORD** MOD. **TRANSIT** YEAR **01** → PETROL DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment on the left lateral panel of the wing.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, passenger's side.
POWER SUPPLY	+30: connect to the 4 mm ² RED wire located in the wiring harness placed under the steering column. -31: connect to the original ground terminal located behind the driver's side panel
IGNITION WIRE	Connect to the GREEN/WHITE wire, at the position nr. 7, of the 16 way blue connector of the central locking unit placed behind the passenger's side glove compartment, under the fuse box.
DIRECTION INDICATORS	Connect to the LIGHT BLUE/ORANGE wire, at the position nr.1 and to the GREY/WHITE wire, at the position nr.9, of the 16 way green connector of the central locking unit located behind the passenger's side glove compartment, under the fuse box.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the GREEN/ORANGE wire located in the wiring harness coming out of the control push button. Front window, passenger's side: cut the YELLOW/VIOLET wire located in the wiring harness coming out of the driver's side door.
CENTRAL DOORS LOCKING	Negative control signal Connect to the VIOLET/BLACK wire at the position nr.14 (unlock) and to the BLACK/RED wire at the position nr.15 (lock) located in the 16 way blue connector of the central locking unit, behind the passenger's side glove compartment, under the fuse box.
IMMOBILISATION POINT	Gasoil pump Cut the 1,5 mm ² GREEN/BLACK wire coming out of the fuse nr.15, in the fuse box, behind the passenger's side glove compartment.
STARTER	+50: Cut the GREY wire located in the connector on the side of the plastic cover located on the right side of the battery.
BONNET SWITCH	Install an additional switch on the headlamp support plate near the left lateral light, passenger's side.
DOORS SWITCH	Connect to the 1 mm ² YELLOW/RED wire at the position nr.8, of the 16 way blue connector, of the central locking unit placed behind the passenger's side glove compartment, under the fuse box.
BOOT SWITCH	Install an additional switch on the locking boot bumper of the hatchback.