

CAR SECURITY

| SPECIFIC VEHIC | CLE ALARM FITTING INSTRUCTIONS | |
|----------------|--------------------------------|--|
| | | |

www.cobra.it

HYUNDAI MAKE

MOD. **SANTA FE'** YEAR

PETROL DIESEL

X

REV. 00

ALARM/SIREN **POSITION**

Position the compact alarms and the sirens on the driver's side wheelhouse.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+30: connect to the 4 mm² RED wire in the multiway connector, in the fuse box.

-31: connect to one of the ground terminals behind the left lateral bulkhead, driver's side.

IGNITION WIRE

+ 15/54: connect to the BLUE/ORANGE wire, at the position nr.7, of the 15 way white connector placed above on the right of the fuse box, under the driver's side dashboard.

DIRECTION INDICATORS

Connect to the GREY wire, at the position nr. 1 and to the LIGHT GREY wire, at the position nr. 2, in the wiring harness coming out of the 15 way white connector placed above, on the right, in the fuse box, under the driver's side dashboard.

ELECTRIC WINDOWS

Positive control signal Front window, driver's side:

cut the BROWN wire located in the wiring harness coming out of the driver's side push

button.

Front window, passenger's side:

cut the GREY wire.

Rear window, driver's side: cut the YELLOW wire.

Rear window, passenger's side:

cut the PINK wire.

The above connections are made in the wiring harness coming out of the driver's side door.

CENTRAL DOORS LOCKING

Negative control signal

Connect to the YELLOW wire (lock) and to the YELLOW/ORANGE wire (unlock) located in the wiring harness coming out of the 22 way white connector behind the left lateral

bulkhead, driver's side.

IMMOBILISATION POINT Fuel pump

Cut the RED wire located in the wiring harness coming out of the 20 way white connector placed behind the relais holder box, on the right, near the battery, in the engine

compartment.

STARTER +50: Cut the BLUE wire located in the wiring harness coming out of the connector of the

ignition key.

BONNET SWITCH Install an additional switch on the headlamp support plate, driver's side.

Connect to the 1 mm2 YELLOW wire, in the wiring harness coming out of the 8 way white **DOORS SWITCH**

connector, under the connector concerning the connection of the direction indicators.

BOOT SWITCH Connect to the 0,5 mm² BLACK/BROWN wire located in the wiring harness that from the

driver's side front sill cover goes towards the rear part of the vehicle.

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

hysan02gbb.doc