



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	LANCIA	MOD.	Y	YEAR	97 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the panel of the left lateral wing, driver's side, between the battery and the headlamp. Run the cables through the original rubber plug located on the bulkhead that divides the engine compartment from the cabin, behind the shock absorber on the driver's side.						
CENTRAL UNIT POSITION	The modular systems and the modules should be positioned behind the left lateral panel under the dashboard on the driver's side.						
POWER SUPPLY	+ 30: Connect to the 5 mm ² RED wire in the 2 way black connector located down, on the left of the fuse box. - 31: Connect with a cable-end connector to one of the ground pins located behind the left lateral panel on the driver's side.						
IGNITION WIRE	Connect to the 1,5 mm ² BLUE/RED wire in the 18 way connector, the one furthest to the right at the fuse box.						
DIRECTION INDICATORS	Connect to the 1,5 mm ² LIGHT BLUE and LIGHT BLUE/BLACK wires. They are located in the fuse box connectors (one is in the middle of the right vertical column and the other is in the middle of the lower row).						
ELECTRIC WINDOWS	At rest negative Driver's window: Cut the 1,5 mm ² RED/BLACK wire. Passenger's window: Cut the 1,5 mm ² WHITE wire. These wires are located in the wiring harness coming out of the respective switches.						
CENTRAL DOORS LOCKING	Negative control signal Connect to the 1 mm ² LIGHT BLUE (unlock) wire at the position n°13 and WHITE (lock) wire at the position n° 8 in the wiring harness that comes out of the 14 way white connector located behind the left moquettes bulkhead on the driver's side.						
IMMOBILISATION POINT	Fuel pump Cut the 1,5 mm ² BROWN/WHITE wire in the left connector, in the fuse box.						
STARTER	+ 50: Cut the BROWN wire located in the wiring harness that comes out of the 10 A fuse, under the plastic cover, in the central area of the engine compartment.						
BONNET SWITCH	Install an additional switch on the headlamp support grill, near the original bonnet bumper rubber.						
DOORS SWITCH	Connect to the 1 mm ² WHITE/GREEN wire in the wiring harness that comes out of the driver's door.						
BOOT SWITCH	Connect to the 1 mm ² VIOLET/BLACK wire in the wiring harness that comes out of the 2 way connector of the rear lamp.						