

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE MCC MOD. SMART* YEAR $03 \rightarrow$ PETROL \square

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens behind the front wheelhouse, on the rod on the side of the windshield wiper cup. Pass the cables using the original rubber located behind the

driver's side light.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the driver's side dashboard.

POWER SUPPLY

+30: connect to the 4mm² RED wire, in the 3 way black connector, in the fuse box. **-31:** connect to one of the ground terminals located behind the driver's side bulkhead.

IGNITION WIRE

+15/54: connect to the GREY/GREEN wire at the position nr.3, in the 12 way brown connector, in the fuse box.

DIRECTION INDICATORS

Connect to the 1mm² wires: GREEN/BLACK at the position nr. 11 and to the WHITE/BLACK at the position nr. 1, located in the 40 way white connector, in the fuse box.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the 2mm² GREEN wire coming out of the motor, driver's side.

Front window, passenger's side:

cut the 2 mm² GREEN wire coming out of the motor, passenger's side.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

Art. 3800 Vehicle Position
GREY/BLACK WHITE/BLUE Wiring harness coming out driver's side door
YELLOW/BLACK GREY/BLUE Wiring harness coming out driver's side door

VIOLET/WHITE Ground car body ORANGE/WHITE Ground car body

VIOLET WHITE/BLACK 40 way white connector, in the fuse box.

ORANGE Ground car body

Refer to the "A" diagram of the dedicated installations manual, inside the kit of the antitheft.

IMMOBILISATION POINT Fuel pump

Cut the RED/BLACK wire, at the position nr.9, in the 12 way brown connector, in the fuse

box.

STARTER +50: Cut the 2,5 mm² BLUE wire, in the 2 way white connector, in the fuse box.

BONNET SWITCH Install an additional switch on the headlamp support plate, near the left lateral light.

DOORS SWITCH Connect to the YELLOW/WHITE wire at the position nr.4 (ant. lef), and to the

YELLOW/RED wire at the position nr.19 (ant. right) in the 40 way white connector, in the

fuse box.

BOOT SWITCH Connect to the BROWN/YELLOW wire, in the 4 way black connector of the lamp

placed in the central consolle.