



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MAZDA** MOD. **6 *** YEAR **03** → PETROL DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the support of the shock absorber, passenger's side.																					
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.																					
POWER SUPPLY	+30: connect to the WHITE/RED wire located in the 24 way white connector, in the fuse box, placed behind the driver's side sill cover. -31: connect with a cable terminal directly to the car body.																					
IGNITION WIRE	+15/54: connect to the RED/WHITE wire, in the 14 way grey connector, in the fuse box located behind the driver's side sill cover.																					
DIRECTION INDICATORS	Connect to the GREEN/WHITE and GREEN/ORANGE wires in the 24 way white connector, in the fuse box, placed behind the driver's side sill cover.																					
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the RED wire in the 12 way white connector, directly in the push-buttons panel inside the driver's side door. Front window, passenger's side: cut the GREEN/WHITE wire in the wiring harness coming out of the driver's side door. Rear window, driver's side: cut the the RED/GREEN wire in the wiring harness coming out of the driver's side door. Rear window, passenger's side: cut the BLUE/WHITE wire in the wiring harness coming out of the driver's side door.																					
ACTIVAT./DEACTIVATION CONTROLS	<p>Connections antitheft/vehicle</p> <table border="0" style="width: 100%;"> <thead> <tr> <th style="text-align: left;">Art.3800</th> <th style="text-align: left;">Vehicle</th> <th style="text-align: left;">Position</th> </tr> </thead> <tbody> <tr> <td>YELLOW/BLACK</td> <td>RED/BLUE</td> <td>6 way white connector</td> </tr> <tr> <td>GREY/BLACK</td> <td>RED/BLACK</td> <td>6 way white connector</td> </tr> <tr> <td>VIOLET</td> <td>GREEN/WHITE (Bik.)</td> <td>24 way white connector</td> </tr> <tr> <td>ORANGE</td> <td>Ground</td> <td>supply in the fuse box</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>Ground</td> <td>car body</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>ground</td> <td>supply in the fuse box</td> </tr> </tbody> </table> <p>The 6 way white connector is located in the upper part, on the right, behind the glove compartment, passenger's side. The 24 way white connector is located in the fuse box. Refer to the A diagram in the dedicated installation manual.</p>	Art.3800	Vehicle	Position	YELLOW/BLACK	RED/BLUE	6 way white connector	GREY/BLACK	RED/BLACK	6 way white connector	VIOLET	GREEN/WHITE (Bik.)	24 way white connector	ORANGE	Ground	supply in the fuse box	VIOLET/WHITE	Ground	car body	ORANGE/WHITE	ground	supply in the fuse box
Art.3800	Vehicle	Position																				
YELLOW/BLACK	RED/BLUE	6 way white connector																				
GREY/BLACK	RED/BLACK	6 way white connector																				
VIOLET	GREEN/WHITE (Bik.)	24 way white connector																				
ORANGE	Ground	supply in the fuse box																				
VIOLET/WHITE	Ground	car body																				
ORANGE/WHITE	ground	supply in the fuse box																				
IMMOBILISATION POINT	Fuel pump Cut the GREEN/RED wire in the 8 way white connector located in the lower part, on the right of the fuse box, driver's side.																					
STARTER	+50: Cut the BLACK/BLUE wire located in the wiring harness coming out of the connector of the ignition key.																					
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.																					
DOORS SWITCH	Connect to the GREEN/ORANGE wire located on the upright support, driver's side.																					
BOOT SWITCH	Connect to the BROWN wire in the wiring harness located in the driver's side base knob.																					