



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MAZDA	MOD.	626	YEAR	01 →	PETROL	<input type="checkbox"/>	DIESEL	<input checked="" type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, on the bulkhead of the support of the passenger's side shock absorber. Pass the cables through the rubber sleeve above the lung of the servobrake.								
POWER SUPPLY	+ 30 : connect to the 4 mm ² WHITE/RED wire located in the multiway connector placed behind the fuse box. - 31 : connect to the car body.								
IGNITION WIRE	+ 15/54 : connect to the 2,5 mm ² BLUE wire with SILVER references located in the wiring harness coming out of the 8 way connector, in the lower part, behind the fuse box.								
DIRECTION INDICATORS	Connect to the 1 mm ² GREEN/WHITE and GREEN/BLACK wires with SILVER references located in the bundle of cables coming out of the steering column.								
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the RED/BLACK wire with LIGHT BLUE reference located in the wiring harness coming out of the locking push button placed inside the driver's side door. Front window, passenger's side: cut the GREEN/WHITE wire with LIGHT BLUE reference. Rear window, driver's side: cut the RED/GREEN wire with LIGHT BLUE reference. Rear window, passenger's side: Cut the BLUE/WHITE wire with LIGHT BLUE reference. The above mentioned wires are located in the wiring harness coming out of the driver's side door.								
CENTRAL DOORS LOCKING	Negative control signal Refer to diagram nr.138 for the 3100 and 3900 series antithefts. Refer to diagram nr.138A for Bridge serie antithefts.								
IMMOBILISATION POINT 1	Gasoil pump Cut the BLACK/BLUE wire located in the wiring harness coming out of the central placed under the steering column.								
IMMOBILISATION POINT 2	Electronic central unit Cut the 0,5 mm ² BLACK/WHITE wire with SILVER references located in the wiring harness coming out of the 8 way connector, behind the fuse box (it is the first of the three wires starting from the lower part).								
STARTER	+ 50 : cut the BLACK/LIGHT BLUE wire located in the wiring harness coming out of the connector of the ignition key.								
BONNET SWITCH	Install an additional switch on the headlamp support plate, using the original hole near the left lateral bonnet stop.								
DOORS SWITCH	Connect to the 1 mm ² BLACK/BLUE wire with SILVER reference located in the wiring harness of the 3 way connector, in the front part of the fuse box.								
BOOT SWITCH	Connect to the 1 mm ² GREEN/RED wire with SILVER references located in the wiring harness coming out of the boot lamp.								



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°138

Diagram to make the central locking on
MAZDA 626
(for antithefts with 6 wires locking)

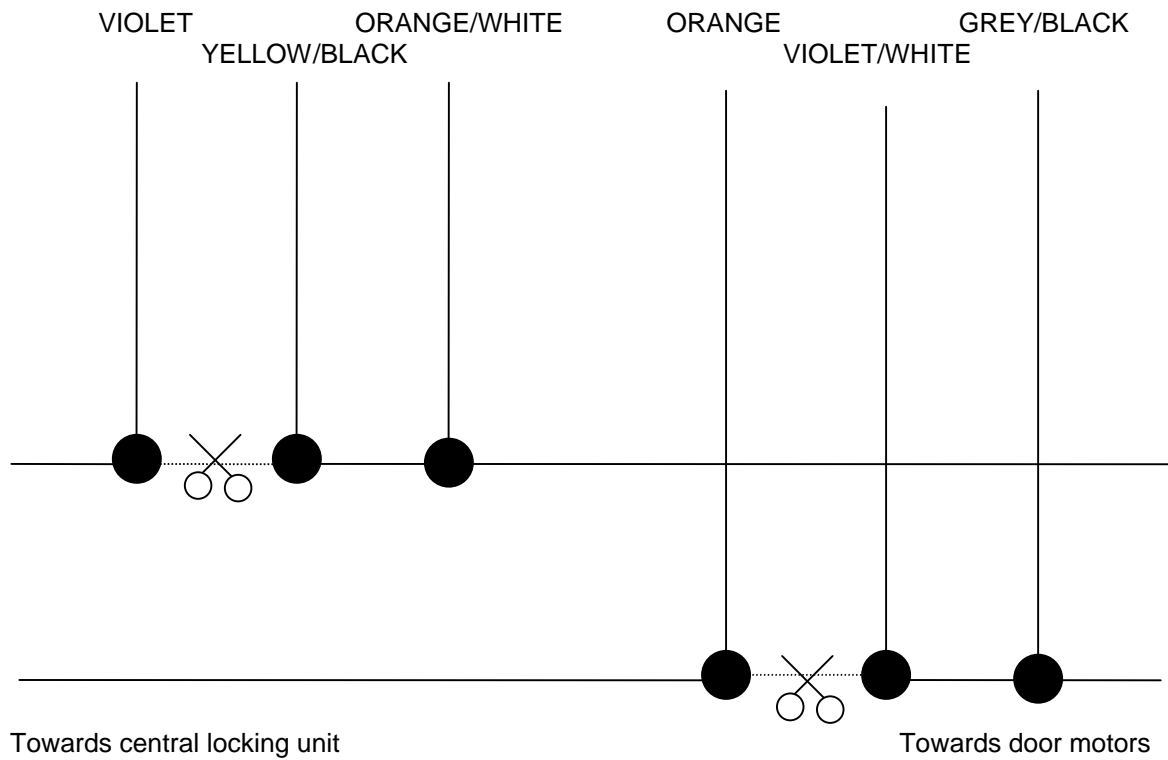



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°138A

Diagram to make the central locking on
MAZDA 626
(for Bridge serie antithefts with no 6 wires locking)

To carry out this diagram it is necessary to install the module art. 1044, which is controlled by the BROWN wire (negative at antitheft set-in).

