



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MAZDA** MOD. **TRIBUTE** YEAR **03** → PETROL DIESEL

ALARM/SIREN POSITION	Position the compact alarms and the sirens on the side member of the shock absorber, passenger's side. Pass the cables using the original fairlead located in the driver's side wheelhouse.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	+30: connect to the big wire located in the wiring harness. -31: connect directly to the car body.
IGNITION WIRE	+15/54: connect to the RED/YELLOW wire, at the position nr.13, of the 22 way grey connector coming out of the white central located on the left of the central tunnel.
DIRECTION INDICATORS	Connect to the WHITE/LIGHT BLUE and GREEN/WHITE wires located in the 4 way light blue connector coming out of the relay of the direction indicators under the driver's side dashboard, behind the adjustment of the headlights inclination.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the WHITE/BLACK wire in the wiring harness coming out of the 14 way white connector, inside the driver's side door. Front window, passenger's side: cut the PINK/LIGHT BLUE wire. Rear window, driver's side: cut the YELLOW/BLACK wire. Rear window, passenger's side: cut the GREY/ORANGE wire. The above mentioned wires are located in the wiring harness coming out of the driver's side door.
CENTRAL DOORS LOCKING	Negative control signal Connect to the ORANGE/BLACK wire at the position nr.7 (lock), and YELLOW/RED wire at the position nr.6 (unlock), located in the 26 way grey connector, coming out of the white central placed on the left, in the central tunnel. The 26 way and 22 way grey connectors are located in the white central placed on the left in the central tunnel.
IMMOBILISATION POINT	Cut the YELLOW/GREEN wire located in the wiring harness coming out of the inertial switch.
STARTER	+50: Cut the BROWN/LIGHT BLUE wire located in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate.
DOORS AND HATCHBACK DOOR SWITCH	Connect to the VIOLET/GREEN wire, at the position nr.10, in the 26 way grey connector coming out of the white central placed on the left of the central tunnel.