



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

MERCEDES

MOD.

A 140

YEAR

98 →

PETROL
DIESEL

ALARM/ SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the shock absorber pillar on the passenger's side. The modular system and the modules should be positioned under the passenger's footrest. Pass the cables through the original rubber plug located in the black box on the bulkhead, passenger's side.

POWER SUPPLY

+ 30: Connect to the 3 mm² RED wire in the wiring harness that comes out of 5 way black connector located in the connections under the dashboard on the passenger's side.
- 31: Connect with a terminal to one of the original bolts in the connections under the dashboard on the passenger's side.

IGNITION WIRE

Connect to the 1,5 mm² RED/GREEN wire located in the wiring harness coming out of the fuse nr.1 in the fuse box, under the mat, drivers's side.

DIRECTION INDICATORS

Connect to the 1 mm² BLACK/BROWN and BLACK/YELLOW wires located in the bundle of cables that runs from the passenger's sill cover to the engine compartment, under the glove box, passenger's side.

ELECTRIC WINDOWS

Positive control signal
Front window, driver's side:
Cut the 1,5 mm² GREEN wire.
Front window, passenger's side:
Cut the 1,5 mm² GREEN/WHITE wire.

CENTRAL DOORS LOCKING

Negative control signal
Connect to the 1 mm² BLUE wire (unlock) and BLACK wire (lock) located in the wiring harness coming out of the passenger's side door.

IMMOBILISATION POINT 1

Fuel pump
Cut the 1,5 mm² RED/BLUE wire in the wiring harness that comes out of the relay marked "K7", in the fuseholder box located in the battery compartment under the passenger's floor mat.

IMMOBILISATION POINT 2

Additional immobilisation point
Cut the RED/GREEN wire located in the wiring harness coming out of the relay marked "K7", in the fuseholder box, in the battery compartment under the passenger's floor mat.

STARTER

+ 50: Cut the 1,5 mm² PINK/RED wire located in the wiring harness that comes out of the relay marked "K8", in the fuseholder box, in the battery compartment under the passenger's floor mat.

BONNET SWITCH

Install an additional switch on the headlamp support plate, on the right or left of the engine compartment.

DOORS AND BOOT SWITCH

Connect to the 1 mm² BROWN/RED wire located in the bundle of cables that runs from the dashboard on the passenger's side to the "A pillar".