

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

X

www.cobra.it

MERCEDES MAKE

MOD.

E CLASS

 $96 \rightarrow$

PETROL DIESEL

ALARM/SIREN

POSITION

Position the compact alarms and the sirens in the engine compartment, on the bulkhead of the driver's side wheel housing, between the headlamp and the

The modular systems and the modules should be positioned in the prepared

compartment behind the mat of the sill cover, passenger's side.

POWER SUPPLY

+30: Connect to the 4 mm² RED wire in the 3 way general power supply

connector of the fuse box.

- 31: Connect to the car body.

IGNITION WIRE

+15/54: Connect to the 3 mm² PINK/RED wire located in the wiring harness inside

the fuse box.

DIRECTION INDICATORS

Connect to the 1 mm2 BLACK/GREEN and BLACK/WHITE wire located in the

wiring harness inside the fuse box in the engine compartment.

CENTRAL DOORS LOCKING

Original central locking system

Negative control signal

Connect with wire terminals at positions nr. 11 and nr. 12 at the 18 way white connector in the compressor unit, located under the rear seat on the passenger's

side.

IMMOBILISATION POINT 1

Fuel pump

Cut the 1,5 mm² RED/WHITE wire in the wiring harness that comes out of the

pump relay near the compressor.

IMMOBILISATION POINT 2

Ignition wire

Cut the 2 mm² PINK/RED wire located in the wiring harness inside the cable run

on the passenger's side.

BONNET SWITCH

Install an additional switch near the fuse box. You may use a bracket.

DOORS SWITCH

Connect to the 1 mm2 BROWN/VIOLET, BROWN/GREEN, BROWN/BLUE,

BROWN/WHITE wires in the wiring harness coming out of the connector of the

compressor located under the rear seat on the passenger's side.

BOOT SWITCH

Connect to the 1 mm² BROWN/YELLOW wire in the wiring harness coming out

of the connector of the compressor located under the rear seat on the

passenger's side.

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

mecle96abb.doc