



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

MERCEDES

MOD.

S CLASS*

YEAR.

01 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens behind the passenger's lateral light.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the passenger's side mat.

POWER SUPPLY

+ 30: connect to the wire coming out of one of the original shunting located in the fuse box.
- 31: connect directly to the car body.

IGNITION WIRE

+ 15/54: connect to the wire located in the wiring harness coming out of the connector of the ignition key.

DIRECTION INDICATORS

Connect to the BLACK/WHITE and BLACK/GREEN wires located in the wiring harness inside the plastic channel placed behind the passenger's side sill cover.

ELECTRIC WINDOWS

Comfort closing

Negative control signal

Connect to the BLUE/YELLOW wire at the position nr. 3, in the 29 way green connector coming out of the passenger's side door.

ACTIVAT./DEACTIVATION CONTROLS

Connections antitheft/vehicle

38XX	Vehicle	Position
GREY/BLACK	YELLOW	position nr.4
YELLOW/BLACK	GREEN	position nr.3
VIOLET/WHITE	+30	in the fuse box
VIOLET	+30	in the fuse box
ORANGE	+30	in the fuse box
ORANGE/WHITE	+30	in the fuse box

The positions nr.3 and nr.4 are located in the connector of the "IR" central unit placed behind the passenger's side foot support, behind the airbag.

IMMOBILISATION POINT

Fuel pump

6-8 cylinders model: cut the RED/BLUE wire located in the wiring harness inside the passenger's side channel.

12 cylinders model: cut both the RED/BLUE wires (1 pump and 2 pump) located in the wiring harness inside the passenger's side channel.

Note: the wires must be interrupted with 2 separated relais.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the BROWN/GREY wire for the front doors and to the BROWN/RED wire for the rear doors located directly on the coming out of the respective serial switches.

BOOT SWITCH

Connect to the BROWN/YELLOW wire at the position nr. 2, in the 10 way connector located on the passenger's side rear light.