

CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

REV. 00

MAKE MERCED	ES MOD. V CLASS YEAR 99 \rightarrow DIESEL X
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment behind the support of the shock absorber, passenger's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the left side of the dashboard, driver's side.
POWER SUPPLY	 + 30: connect to the 4 mm² RED wire located at the entrance of the fuse box. - 31: connect to the 3 mm² BLACK wire coming out of the general power supply behind the bulkhead, driver's side.
IGNITION WIRE	+ 15/54: connect to the wire located at the position marked "+15" in the wiring harness coming out of the ignition switch.
DIRECTION INDICATORS	Connect to the BLACK/WHITE wire located at the position nr.15 and BLACK/GREEN wire located at the position nr.17 of the 18 way black connector behind the fuse box.
ELECTRIC WINDOWS	Not foreseen as original equiment.
CENTRAL DOORS LOCKING	Additional motor Cut the BLUE/RED wire located at the position nr.4 (lock) and WHITE/RED wire at the position nr.3 (unlock) in the 18 way black connector marked ST1 and coming out of the central doors locking unit behind the gloves box, passenger's side. Refer to the diagram nr. 128 for Bridge serie antithefts or to the diagram nr.128A for 3100 serie antithefts.
IMMOBILISATION POINT	Gasoil pump The vehicle has the serial immobilizer controlled by the transponder.
STARTER	+ 50: Cut the wire located at the position marked "+50" coming out of the ignition key.
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the rubber trim of the bonnet.
DOORS AND BOOT SWITCH	To protect the front doors connect to the BROWN/WHITE wire located in the connector coming out of the serial switch, driver's side. To protect the rear doors connect to the BROWN/BLUE/WHITE wire at the position nr.18 in the 18 way black connector wound in the connectors cover located under the left side of the dashboard, driver's side.

meclv99gbd.doc

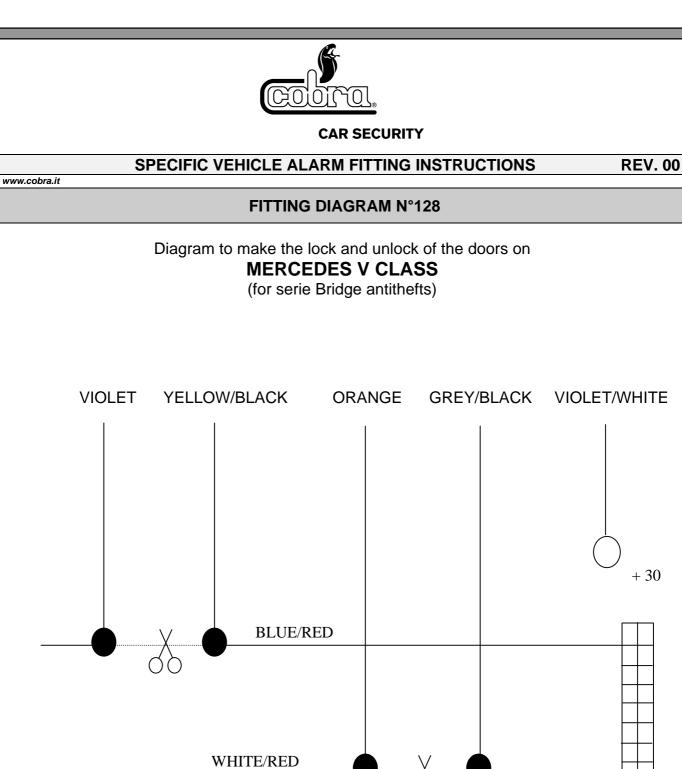


Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

Towards door motors

meclv99gbd.doc

18 way black connector

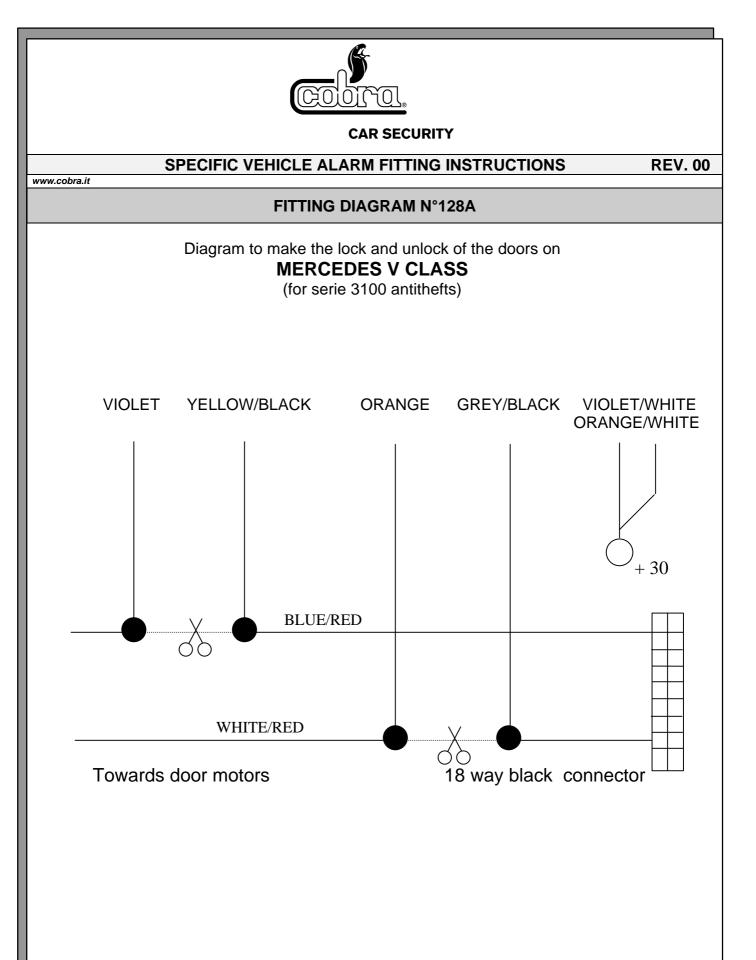

meclv99gbd.doc