



## SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

[www.cobra.it](http://www.cobra.it)

MAKE **MITSUBISHI** MOD. **PAJERO DI-D** YEAR **03** → PETROL   
DIESEL

### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment, on the support of the passenger's side shock absorber. Pass the cables through the original core hitch located in the bulkhead that divides the engine compartment and the passenger's compartment, passenger's side.

### CENTRAL UNIT POSITION

The modular systems and the modules should be positioned under, on the left of the dashboard, driver's side, behind the fuse box.

### POWER SUPPLY

**+30:** connect to the 4 mm<sup>2</sup> RED wire located in a multiway connector, in the fuse box.  
**-31:** connect with a terminal cable directly to the car body.

### IGNITION WIRE

**+15/54:** Connect to the BLACK/WHITE wire with SILVER reference located in the wiring harness placed on the left, along the steering column.

### DIRECTION INDICATORS

Connect to the GREEN/RED wire at the position nr.9 and to the GREEN/YELLOW wire with SILVER reference at the position nr.7 located in the 15 way white connector, in the lower part of the fuse box placed under the driver's side dashboard.

### ELECTRIC WINDOWS

#### BUS controls

The signals to make the connection of the windows module are not available.

### CENTRAL DOORS LOCKING

#### Negative control signals

##### Short wheel base version

Connect to the GREEN/WHITE wire (lock) and to the BROWN/WHITE wire (unlock) located in the 32 way white connector located on the left of the fuse box, under the driver's side dashboard.

##### Long wheel base version

Connect to the GREEN/RED wire (lock) and to the BROWN/RED wire (unlock) located in the 32 way white connector, placed on the left of the fuse box, under the dashboard, driver's side.

### IMMOBILISATION POINT

#### Gasoil pump

Cut the GREEN/BLACK wire with SILVER reference located in the wiring harness coming out of the relay marked "D", placed in the relay holder (the little one) on the side of the battery.

### STARTER

**+50:** Cut the BLACK/YELLOW wire located in the wiring harness coming out of the ignition key.

### BONNET SWITCH

Install an additional switch on the front headlamp support plate, near the original rubber bonnet bumper.

### DOORS AND BOOT SWITCH

Connect to the RED/GREEN wire with SILVER reference located at the position nr.13 of the 15 way white connector, placed in the lower part of the fuse box, under the driver's side dashboard.