



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **MITSUBISHI** MOD. **SPACE STAR *** YEAR. **03** → PETROL DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens in the lower part of the black box, on the left of the engine compartment. Pass the cables using the original rubber core hitch located under the cover of the left side of the wheelhouse.

- CENTRAL UNIT POSITION** Position the modular systems and the modules under the dashboard, driver's side.

- POWER SUPPLY** + 30: connect to the WHITE wire located at the entrance of the fuse box.
- 31: connect with a ring terminal directly to the car body.

- IGNITION WIRE** +15/54: connect to the BLACK/WHITE wire located in the wiring harness on the coming out of the ignition key.

- DIRECTION INDICATORS** Connect to the RED/GREEN wire and to the GREEN/BLACK wire located in the flying wiring harness placed behind the fuse box.

- ELECTRIC WINDOWS** **Positive control signal**
Front window, driver's side:
cut the GREEN/RED wire.
Front window, passenger's side:
cut the RED/YELLOW wire.
The connections must be done on the coming out of the push-button panel inside the driver's side door.

- ACTIVAT./DEACTIVATION CONTROLS** **Connections antitheft/vehicle**

Art. 3800	Vehicle	Position
YELLOW/BLACK	BLUE/WHITE	pos. nr.23, 32 way white connector
GREY/BLACK	BLUE/BLACK	pos. nr.29, 32 way white connector
VIOLET	RED/GREEN	on the coming out of the dir. ind. switch
ORANGE	ground	car body
VIOLET/WHITE	ground	car body
ORANGE/WHITE	ground	car body

The 32 way white connector is located behind the sill cover, driver's side. Refer to the "A" diagram of the dedicated installations manual, inside the kit of the antitheft.

- IMMOBILISATION POINT** **Fuel pump**
Cut the BLACK/RED wire located in the wiring harness coming out of the fuel pump placed under the rear seat.

- STARTER** +50: Cut the BLACK/RED wire located in the wiring harness coming out of the ignition key.

- BONNET SWITCH** Install an additional switch on the headlamp support plate, driver's side.

- DOORS AND BOOT SWITCH** Connect to the RED/GREEN wire located in the wiring harness coming out of the 6 way white connector placed in the lower part of the dashboard, driver's side.