

CAR SECURITY

SPECIFIC VEHICLE ALARIVI FITTING INSTRUCTIONS REV. UT	SPECIFIC VEHICLE ALARM FITTING	G INSTRUCTIONS	REV. 01
---	--------------------------------	----------------	---------

www.cobra.it

MAKE NISSAN MOD. X-TRAIL* YEAR. 02 ® PETROL I

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the driver's side wheelhouse, near the

battery.

CENTRAL UNIT POSITION Position the modular system and the modules under the driver's side dashboard.

POWER SUPPLY +30: Connect with a cable terminal to the clamp marked '+30' located in the general

supply wiring placed in the black box on the side of the battery, in the engine

compartment.

-31: Connect with a cable terminal directly to the car body.

IGNITION WIRE + 15/54: connect to the GREEN wire, with 2 ORANGE references, located in the wiring

harness coming out of the 20 way grey connector placed on the coming out of the white

central locking unit fixed behind the driver's side glove compartment.

DIRECTION INDICATORSConnect to the GREEN/BLACK wire with 2 ORANGE references and to the

GREEN/YELLOW wire with 2 ORANGE references, located in the wiring harness coming out of the first 10 way white connector, under the driver's side glove

compartment.

ELECTRIC WINDOWS Negative control signal

Front window, driver's side:

cut the GREEN/BLACK wire located in the wiring harness coming out of the 16 way

white connector, directly inside the driver's side door.

Front window, passenger's side:

cut the RED/WHITE wire located in the wiring harness of the 14 way brown connector

coming out of the driver's side door.

Rear window, driver's side:

cut the GREEN/WHITE wire located in the wiring harness of the 14 way brown

connector coming out of the driver's side door.

Rear window, passengers' side:

cut the RED/YELLOW wire located in the wiring harness of the 14 way brown connector

coming out of the driver's side door.

ACTIVAT./DEACTIVATION

CONTROLS

Connection vehicle/3800 antithefts

Refer to the diagram nr.134.

IMMOBILISATION POINT

Fuel pump

Cut the BLACK/YELLOW wire located in the wiring harness coming out of the connector

of the blue relay placed behind the driver's side bulkhead.

STARTER

+50: Cut the BLACK/WHITE wire located in the wiring harness coming out of the 6 way

white connector, directly coming out of the ignition key.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS AND BOOT SWITCH

Connect to the RED/YELLOW wire at the position nr.1 of the 20 way grey connector located on the coming out of the white central locking unit fixed behind the driver's side

glove compartment.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS REV. 01 www.cobra.it

FITTING DIAGRAM N°134

Diagram to connect the 3800 serie antithefts on NISSAN X-TRAIL

