



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR.	PETROL	DIESEL
<b>OPEL</b>	<b>AGILA</b>	<b>02</b> →	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens near the shock absorber, driver's side. Pass the cables using the original rubber core hitch placed on the bulkhead driver's side, between the shock absorber and the servobrake group.			
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.			
<b>POWER SUPPLY</b>	<b>+30:</b> connect to the 4 mm <sup>2</sup> RED wire located at the entrance of the fuse box. <b>- 31:</b> connect with a ring terminal directly to the car body.			
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the YELLOW wire with SILVER reference located at the position nr. 13, in the 16 way white connector coming out of the central doors locking unit placed on the left, under the dashboard, driver's side.			
<b>DIRECTION INDICATORS</b>	Connect to the GREEN/YELLOW wire with SILVER references and GREEN/RED wire with SILVER references located in the bundle of cables placed behind the right lateral bulkhead, passenger's side. As alternative, connect to the same wires located in the wiring harness coming out of the lights switch placed under the steering column.			
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, driver's side</b> Cut the RED wire with SILVER references, position nr. 10, located in the connector coming out of the serial push botton. <b>Front window, passenger's side</b> Cut the RED/BLUE wire with SILVER references located in the bundle of cables coming out of the driver's side door.			
<b>CENTRAL DOORS LOCKING</b>	<b>Negative control signal</b> The lock and unlock of the central doors locking is done connecting both the lock and unlock pulses to the WHITE wire with SILVER reference, at the position nr. 6, placed in the 18 way white connector, coming out of the central doors locking unit located on the left of the steering column.			
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the PINK wire with SILVER reference located in the bundle of cables behind the sill cover, passenger's side.			
<b>STARTER</b>	<b>+50:</b> Cut the BLACK/YELLOW wire located in the wiring harness coming out of the connector of the ignition key.			
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate, driver's side.			
<b>DOORS AND BOOT SWITCH</b>	Connect to the BLACK/RED wire with SILVER references, at the position nr. 15, in the 18 way white connector, coming out of the central doors locking unit placed on the left of the steering column.			