



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR	PETROL	DIESEL
<b>OPEL</b>	<b>ASTRA*</b>	<b>98</b> →	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment, behind the driver's side headlamp. Position the modular systems and the modules under the dashboard, driver's side. Drill on the left of the bonnet opening wire to pass the cables, under the plastic plate that divides the engine compartment and the passenger's compartment.			
<b>POWER SUPPLY</b>	<b>+ 30:</b> connect to the 2 mm <sup>2</sup> RED wire located in the wiring harness coming out of the 80 way green connector, behind the plastic panel, driver's side. <b>- 31:</b> connect with a cable terminal to the ground terminal behind the plastic left lateral panel, driver's side.			
<b>IGNITION WIRE</b>	<b>+ 15/54:</b> connect to the 0,75 mm <sup>2</sup> RED wire located at the position nr. 4 of the connector coming out of the central doors locking unit, behind the right sill cover, passenger's side.			
<b>DIRECTION INDICATORS</b>	Connect to the 0,75 mm <sup>2</sup> WHITE/BLACK and GREEN/BLACK wires located in the wiring harness coming out of the 80 way green connector (positions nr. 65 and nr. 19) behind the sill cover, driver's side. Note: the vehicle has the original blinking system of the directions indicators.			
<b>ELECTRIC WINDOWS</b>	<b>Comfort closing</b> The total closing of the windows is obtained timing the RED/BLUE wire.			
<b>ALARM CONTROLS</b>	<b>For "Plip" antitheft system Art. 0144</b> <b>Positive control signal</b> Connect to the YELLOW/BLACK (set) and RED/BLACK (unset) wires located in the wiring harness coming out of the 80 way green connector and going towards the rear of the vehicle. <b>Note: with such connection the alarm system is setting on/off receiving the signals of lock/unlock of the central doors locking unit. Therefore it is suggested to close the doors pressing always 2 times the radio control push button in order to enable the safety lock.</b>			
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the 1,5 mm <sup>2</sup> RED/BLUE wire located in the wiring harness coming out of the 80 way green connector (position nr. 1), on the rear of the left sill cover, driver's side.			
<b>STARTER</b>	<b>+ 50:</b> Cut the 2,5 mm <sup>2</sup> BLACK/RED wire located in the wiring harness coming out of the lights switch connector.			
<b>BONNET SWITCH</b>	Install an additional switch on the left bonnet stop in correspondence with the driver's side shock absorber, using the foreseen hole.			
<b>DOORS SWITCH</b>	Connect to the 0,5 mm <sup>2</sup> GREY wire located in the wiring harness coming out of the 80 way green connector (position nr. 29) located on the rear of the left sill cover, driver's side.			