



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	MOD.	YEAR	PETROL	DIESEL
OPEL	FRONTERA	00 →	<input checked="" type="checkbox"/>	<input type="checkbox"/>

ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, near the driver's side headlamp.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the left side of the dashboard, driver's side.
POWER SUPPLY	+ 30 : connect to the general power supply located in a multiway connector at the entrance of the fuse box. - 31 : connect with a cable terminal directly to the car body.
IGNITION WIRE	+ 15/54 : connect to the LIGHT BLUE/BLACK wire located in the 13 way connector near the steering column.
DIRECTION INDICATORS	Connect to the GREEN/WHITE and GREEN/BLACK wires located in the 13 way connector near the steering column.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the BROWN/RED wire located in the wiring harness coming out of the driver's side control switch. Front window, passenger's side: cut the BROWN/RED wire located in the wiring harness coming out of the passenger's side control switch. Rear window, driver's side: cut the BROWN/RED wire located in the wiring harness coming out of the driver's side control switch. Rear window, passenger's side: cut the BROWN/RED wire located in the wiring harness coming out of the passenger's side control switch. The above connections must be done inside of each door.
CENTRAL DOORS LOCKING	Negative control signal Connect to the GREEN/RED wire (lock) and to the RED/BLUE wire (unlock) located in the wiring harness coming out of the driver's side door.
IMMOBILISATION POINT	Fuel pump If the vehicle has the inertial switch, it is suggested to interrupt one of the two wires coming out of the same.
STARTER	+ 50 : Cut the BLACK/WHITE wire located in the 13 way white connector, under the driver's side dashboard, on the left of the steering column.
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.
DOORS SWITCH	Connect to the BLACK/WHITE wire located in the wiring harness coming out of the central doors locking unit on the rear of the glove compartment, passenger's side.
BOOT SWITCH	Connect to the wire located in the wiring harness coming out of the boot lamp.