

CAR SECURITY

www.cobra.it							
MAKE	OPEL	MOD.	FRONTERA	YEAR	00 →	PETROL DIESEL	 X
ALARM/SIREN POSITION	Position the side headlan	•	arms and the sirens in the	he engine	compartment	, near the c	driver's
CENTRAL UNIT PO	OSITION Position the	modular syst	ems and the modules ur	nder the lef	t side of the c	dashboard, c	driver's

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

side.

POWER SUPPLY + 30: connect to the general power supply located in a multiway connector at the entrance of the fuse box.

- 31: connect with a cable terminal directly to the car body.

IGNITION WIRE + 15/54: connect to the LIGHT BLUE/BLACK wire located in the 13 way connector near the steering column.

DIRECTION INDICATORSConnect to the GREEN/WHITE and GREEN/BLACK wires located in the 13 way connector near the steering column.

ELECTRIC WINDOWS Positive control signal Front window, driver's side:

cut the BROWN/RED wire located in the wiring harness coming out of the driver's side

control switch.

Front window, passenger's side:

cut the BROWN/RED wire located in the wiring harness coming out of the passenger's side control switch

Rear window, driver's side:

cut the BROWN/RED wire located in the wiring harness coming out of the driver's side control switch.

Rear window, passenger's side:

cut the BROWN/RED wire located in the wiring harness coming out of the passenger's side control switch.

The above connections must be done inside of each door.

CENTRAL DOORS LOCKING Negative control signal

Connect to the GREEN/RED wire (lock) and to the RED/BLUE wire (unlock) located in the wiring harness coming out of the driver's side door.

IMMOBILISATION POINT Gasoil pump

If the vehicle has the inertial switch, it is suggested to interrupt one of the two wires coming

out of the same.

STARTER + 50: Cut the BLACK/WHITE wire located in the 13 way white connector, under the driver's

side dashboard, on the left of the steering column.

BONNET SWITCH Install an additional switch on the headlamp support plate, near the original bonnet bumper

rubber.

DOORS SWITCH Connect to the BLACK/WHITE wire located in the wiring harness coming out of the central

doors locking unit on the rear of the glove compartment, passenger's side.

BOOT SWITCH Connect to the wire located in the wiring harness coming out of the boot lamp.

REV. 00