

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS REV. 00						
www.cobra.it						
MAKE OPE	L MOD.	FRONTE	RA* YEAF	01 →	PETROL DIESEL	x
117 1112	111021		YEAR	(DIESEL	
* Models with original equipment keyless entry system						
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, near the driver's side headlamp.					
CENTRAL UNIT POSITION	Position the modular systems and the modules under the left side of the dashboard, driver's side.					
POWER SUPPLY	 + 30: connect to the general power supply located in a multiway connector at the entrance of the fuse box. - 31: connect with a cable terminal directly to the car body. 					
IGNITION WIRE	+ 15/54: connect to the LIGHT BLUE/BLACK wire located in the 13 way connector near the steering column.					
DIRECTION INDICATORS	Connect to the GREEN/WHITE wire with 2 SILVER references and to the GREEN/BLACK wire with 2 SILVER references located in the 13 way connector, near the steering column.					
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the BROWN/RED wire located in the wiring harness coming out of the driver's side front window motor. Front window, passenger's side: cut the BROWN/RED wire located in the wiring harness coming out of the passenger's side front window motor. Rear window, driver's side: cut the BROWN/RED wire located in the wiring harness coming out of the driver's side rear window motor. Rear window, passenger's side: cut the BROWN/RED wire located in the wiring harness coming out of the passenger's side rear window motor. The above connections must be done inside of each door.					
ACTIVAT./DEACTIVATION CONTROLS	Connections antith 38XX GREY/BLACK YELLOW/BLACK VIOLET/WHITE ORANGE VIOLET ORANGE/WHITE Refer to the diagram	Vehicle ORANGE/SILVER BLUE/SILVER Ground +30 YELLOW/SILVER +30	Position Pos. nr.10, 28 v Pos. nr. 8, 12 v Car body Positive in the f Pos. nr.14, 28 v Positive in the f	vay connector use box. way connector.		
STARTER	+ 50: Cut the BLACK/WHITE wire located in the 13 way white connector, under the driver's side dashboard, on the left of the steering column.					
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the original bonnet bumper rubber.					
DOORS SWITCH	Connect to the BLACK/WHITE wire located in the wiring harness coming out of the central					

doors locking unit on the rear of the glove compartment, passenger's side.

Connect to the wire located in the wiring harness coming out of the boot lamp.

BOOT SWITCH



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°119

To make the connection of Art. 3800 on **OPEL FRONTERA**

