

CAR SECURITY

	SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS	REV. 00
w.cobra.it		

www

PETROL X SINTRA YEAR $97 \rightarrow$ **OPEL** DIESEL MOD. MAKE

ALARM/SIREN **POSITION**

Position the compact alarms and the sirens in the engine compartment, on the available bracket near the passenger's side shock absorber. Pass the cables through the core hitch located above the clutch pedal.

POWER SUPPLY

+ 30: connect to the 4 mm² WHITE/RED wire located at the entrance of the fuse box.

- 31: connect to the car body.

IGNITION WIRE + 15/54: connect to the PINK wire located in the row marked "A" of the multiway

connector, under the driver's side dashboard, on the left of the clutch pedal.

DIRECTION INDICATORS Connect to the BLUE and LIGHT BLUE wires located in the row marked "A" of

the multiway connector, under the driver's side dashboard, on the left of the

clutch pedal.

ELECTRIC WINDOWS Positive control signal

Front window, driver's side

Cut the GREEN wire at the position "A". Front window, passenger's side Cut the BLACK wire at the position "D".

The wire are in the wiring harness coming out of the 16 way connector, near the

door core hitch, driver's side.

CENTRAL DOORS LOCKING Positive control signal

> Connect to the 0,35 mm² ORANGE/BLACK wire at the position "P" (unlock) and RED/BLACK wire at the position "R" located in the connector mentioned above.

For alarm extension (Art. 144)

Connect to the BLACK wire at the position "S" (set) and to the LIGHT BROWN wire at the position "N" (unset), located in the wiring harness of the 16 way

connector, near the core hitch, driver's side.

IMMOBILISATION POINT 1 Fuel pump

Cut the 1.5 mm² GREY wire located in the wiring harness of the left sill cover.

driver's side.

IMMOBILISATION POINT 2 Electronic ignition cut

Cut the 0,35 mm² PINK wire located in the wiring harness coming out of the fuse

marked "injection/immobilizer" in the fuse box, under the dashboard,

passenger's side.

STARTER + 50: Cut the YELLOW wire located in the wiring harness coming out of the

connector under the steering column.

BONNET SWITCH Install an additional switch on the front headlamp support plate, in

correspondence with the left lateral headlamp.

DOORS AND BOOT SWITCHES Connect to the YELLOW wire at the position "J" of the 16 way connector, near

the core hitch, driver's side.