

CAR SECURITY

SPECIFI	IC VEHICLE ALARM FITTING INSTRUCTIONS	REV. 00
www.cobra.it		
MAKE OPEL		TROL X
ALARM/SIREN POSITION	Position the compact alarms and the sirens under the covering of drivers side, using the foreseen holes. Pass the cables through the hitch of the lateral arrow.	
POWER SUPPLY	 + 30: connect to the 3 mm² RED wire of the wiring harness comin black connector behind the fuse box. - 31: connect to the 4 mm² BLACK wire located in the wiringharnes of the general power supply behind the left lateral bulkhead, drivers s 	s coming out
IGNITION WIRE	+ 15/54: connect to the 1 mm ² BLACK wire in the wiring harness cover, drivers side.	along the sill
DIRECTION INDICATORS	Connect to the 1 mm ² GREEN/WHITE wires located in the wiring has sill cover, passengers side.	arness of the
ELECTRIC WINDOWS	Comfort closing Negative control signal Connect to the 0,5 mm ² BROWN/BLACK wire in the wiring harness door locking connector located behind the left lateral bulkhead, passed	
CENTRAL DOORS LOCKING	Negative control signal Connect to the 1 mm ² BROWN/RED wire (lock) and BROWN/ (unlock) located in the wiring harness coming out of the central concentral door locking unit located behind the right bulkhead, passenge	nector of the
IMMOBILISATION POINT	Gasoil pump Cut the 1 mm ² RED wire in the wiring harness coming out of the relicil pump located in the plastic box of the engine compartment, drivers	
BONNET SWITCH	Install an additional switch on the lateral member, drivers side.	
DOORS SWITCH	Connect to the 1 mm ² GREY wire located in the wiring harness and the connector of the central door locking unit, passengers side.	coming out of
BOOT SWITCH	Connect to the BROWN/WHITE wire located in the same connector of	of

the doors wire.