



**SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS**

**REV. 00**

www.cobra.it

MAKE **OPEL** MOD. **VIVARO\*** YEAR. **03** → PETROL  DIESEL

\* Models with original equipmen keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens behind the passenger's side headlamp.																					
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.																					
<b>POWER SUPPLY</b>	<p><b>+30:</b> connect to the position B1, in the connector marked P202, in the central locking unit located behind the steering column.</p> <p><b>- 31:</b> connect to the position B9, in the connector marked P202, in the central locking unit located behind the steering column.</p>																					
<b>IGNITION WIRE</b>	<b>+15/54:</b> connect to the position B3, in the connector marked P202, in the central locking unit located behind the steering column.																					
<b>DIRECTION INDICATORS</b>	Connect to the PINK wire at the position A3 and VIOLET wire at the position A4, in the connector marked P202, in the central locking unit located behind the steering column.																					
<b>ELECTRIC WINDOWS</b>	<p><b>Positive control signal</b></p> <p><b>Front window, driver's side:</b> Cut the WHITE wire, at the position B5, in the 9 way black connector, in the window operating central, inside the driver's side door.</p> <p><b>Front window, passengers side:</b> Cut the WHITE wire, at the position A1, in the 12 way black connector, of the serial push-button panel, in the driver's side door.</p>																					
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<p><b>Connections antitheft/vehicle</b></p> <table border="0"> <thead> <tr> <th>Art. 3800</th> <th>Vehicle</th> <th>Position</th> </tr> </thead> <tbody> <tr> <td>YELLOW/BLACK</td> <td>GREY</td> <td>Pos. A6 in the connector marked P202</td> </tr> <tr> <td>GREY/BLACK</td> <td>WHITE</td> <td>Pos. A9 in the connector marked P202</td> </tr> <tr> <td>VIOLET</td> <td>GREEN</td> <td>Pos. nr.13 in the connector marked P201</td> </tr> <tr> <td>ORANGE</td> <td>PINK</td> <td>Pos. nr.14 in the connector marked P201</td> </tr> <tr> <td>VIOLET/WHITE</td> <td>Ground</td> <td>car body</td> </tr> <tr> <td>ORANGE/WHITE</td> <td>Positive</td> <td>positive of supply</td> </tr> </tbody> </table> <p>The connector marked P202 and P201 are located in the fuse box. Refer to the "C" diagram of the dedicated installations manual in the kit of the antitheft.</p>	Art. 3800	Vehicle	Position	YELLOW/BLACK	GREY	Pos. A6 in the connector marked P202	GREY/BLACK	WHITE	Pos. A9 in the connector marked P202	VIOLET	GREEN	Pos. nr.13 in the connector marked P201	ORANGE	PINK	Pos. nr.14 in the connector marked P201	VIOLET/WHITE	Ground	car body	ORANGE/WHITE	Positive	positive of supply
Art. 3800	Vehicle	Position																				
YELLOW/BLACK	GREY	Pos. A6 in the connector marked P202																				
GREY/BLACK	WHITE	Pos. A9 in the connector marked P202																				
VIOLET	GREEN	Pos. nr.13 in the connector marked P201																				
ORANGE	PINK	Pos. nr.14 in the connector marked P201																				
VIOLET/WHITE	Ground	car body																				
ORANGE/WHITE	Positive	positive of supply																				
<b>IMMOBILISATION POINT</b>	<p><b>Gasoil pump</b></p> <p>Cut the RED wire on the inertial switch, behind the driver's side headlamp.</p>																					
<b>STARTER</b>	<b>+50:</b> Cut the WHITE wire located in the 4 way black connector, under the steering column.																					
<b>BONNET SWITCH</b>	Install an additional switch on the headlamp support plate, driver's side.																					
<b>FRONT DOORS SWITCH</b>	Connect to the GREEN wire, at the position nr. 27, in the connector marked P201, in the central locking unit placed behind the steering column.																					
<b>BOOT AND LATERAL DOOR SWITCH</b>	Connect to the VIOLET wire, at the position nr. 23, in the connector marked P201 in the central locking unit, behind the steering column.																					