

## CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS	REV. 00

www.cobra.it

**PETROL PEUGEOT** 106 YEAR. **DIESEL** MOD. **MAKE** 

ALARM/SIREN **POSITION** 

Position the compact alarms and the sirens in the engine compartment on the shock absorber support.

**CENTRAL UNIT POSITION** 

Position the modular systems and the modules above the glove compartment, driver's side.

**POWER SUPPLY** 

+ 30: connect to the wire marked BH08A located at the position nr. 1 of the 9 way brown connector coming out of the central unit of the central locking.

- 31: connect directly with a cable terminal to the car body. As alternative, connect directly to the negative pole of the battery.

**IGNITION WIRE** 

+ 15/54: connect to the wire marked 2194 located in the 2 way black connector coming out of the ignition key.

**DIRECTION INDICATORS** 

Connect to the RED wire marked 2310 and to the GREEN wire marked 234 located respectively at the positions A4 and A2 placed in the connector coming out of the lights switch.

**ELECTRIC WINDOWS** 

## Positive control signal Front window, driver's side:

cut the LIGHT BROWN wire located at the position nr. 1 of the connector coming out of the relevant control push botton.

# Front window, passenger's side:

cut the LIGHT BROWN wire located at the position nr. 1 of the connector coming out of the relevant control push botton.

CENTRAL DOORS LOCKING Negative control signal

Connect to the GREY wire located at the position nr. 5 (unlock) and to the BROWN wire located at the position nr. 7 (lock) placed in the 9 way brown connector coming out of the central unit of the central locking.

**IMMOBILISATION POINT** 

### Gasoil pump

Cut the wire located at the position D1 or D2, in the 10 way brown connector placed in the fuse holder box, on the side of the battery.

**STARTER** 

+ 50: Cut the activation control wire of the relay of the starter located in the wiring

harness coming out of the connector of the ignition key.

**BONNET SWITCH** 

Install an additional switch on the front headlamp support plate, driver's side.

**DOORS SWITCH** 

Connect to the VIOLET wire located in the wiring harness behind the sill cover, driver's side.

**BOOT SWITCH** 

Connect to the ORANGE wire marked 319 located directly on the coming out of the

boot lamp.