



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **PEUGEOT** MOD. **206\*** YEAR. **01** → PETROL  DIESEL

\* Models with original equipment keyless entry system.

<b>ALARM/SIREN POSITION</b>	Position the compact alarms and the sirens in the engine compartment on the member located on the left of the driver's side shock absorber column.
<b>CENTRAL UNIT POSITION</b>	Position the modular systems and the modules under the dashboard, driver's side.
<b>POWER SUPPLY</b>	+ <b>30</b> : connect to the 3 mm <sup>2</sup> RED supply wire of the BSI operating central. - <b>31</b> : connect directly with a cable terminal to the car body. As alternative, connect directly to the negative pole of the battery.
<b>IGNITION WIRE</b>	+ <b>15/54</b> : connect to the wire located at the position nr. 4 of the 26 way light blue connector coming out of the BSI operating central.
<b>DIRECTION INDICATORS</b>	Connect to the wires located at the positions nr. 10 and nr.11 in the 16 way black connector coming out of the BSI operating central.
<b>ELECTRIC WINDOWS</b>	<b>Positive control signal</b> <b>Front window, driver's side:</b> cut the wire marked nr. 605 located in the wiring harness coming out of the push-button panel of the driver's side door. <b>Front window, passenger's side:</b> cut the wire marked nr. 609 located in the wiring harness coming out of the push-button panel of the driver's side door.
<b>ACTIVAT./DEACTIVATION CONTROLS</b>	<b>Connections antithefts/vehicle</b> Refer to the <b>diagram nr. 94</b> .
<b>IMMOBILISATION POINT</b>	<b>Fuel pump</b> Cut the wire marked nr. 121 located under the relay holder box, in the engine compartment; as alternative the same wire is located in the wiring harness behind the driver's side sill cover.
<b>STARTER</b>	+ <b>50</b> : Cut the activation control wire of the relay of the starter located in the wiring harness coming out of the connector of the ignition key.
<b>BONNET SWITCH</b>	Install an additional switch on the front headlamp support plate, driver's side.
<b>DOORS AND BOOT SWITCH</b>	Connect to the wire located at the position nr. 14 of the 26 way BSI operating central.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 94

Diagram for the interfacing of art. 3800 on  
**PEUGEOT 206**

BSI operating central under the fuse box

Art. 3800

