



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**PEUGEOT**

MOD.

**206**

YEAR.

**01** →

PETROL   
DIESEL

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment on the support located on the left of the driver's side shock absorber column.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

#### POWER SUPPLY

**+ 30:** connect to the 3 mm<sup>2</sup> RED supply wire of the BSI operating central.  
**- 31:** connect directly with a cable terminal to the car body. As alternative, connect directly to the negative pole of the battery.

#### IGNITION WIRE

**+ 15/54:** connect to the wire located at the position nr. 4 of the 26 way light blue connector coming out of the BSI operating central.

#### DIRECTION INDICATORS

Connect to the wires located at the positions nr. 10 and nr.11 in the 16 way black connector coming out of the BSI operating central.

#### ELECTRIC WINDOWS

##### Positive control signal

##### Front window, driver's side:

cut the wire marked nr. 605 located in the wiring harness coming out of the push-button panel of the driver's side door.

##### Front window, passenger's side:

cut the wire marked nr. 609 located in the wiring harness coming out of the push-button panel of the driver's side door.

#### CENTRAL DOORS LOCKING

##### Negative control signal

Refer to the **diagram nr. 88** for the antithefts of the Bridge serie and to the **diagram nr. 88A** for the antithefts of the 3100 serie.

#### IMMOBILISATION POINT

##### Gasoil pump

Cut the wire marked nr. 121 located at the position E6, in the 46 way black connector placed under the fuses holder box in correspondence of the fuse nr. 2, in the engine compartment.

#### STARTER

**+ 50:** Cut the activation control wire of the relay of the starter located in the wiring harness coming out of the connector of the ignition key.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

#### DOORS AND BOOT SWITCH

Connect to the wire located at the position nr. 14 of the 26 way BSI operating central.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 88

Diagram to make the central locking on  
**PEUGEOT 206-406-406 coupè-RANCH**  
(for Bridge serie antithefts)

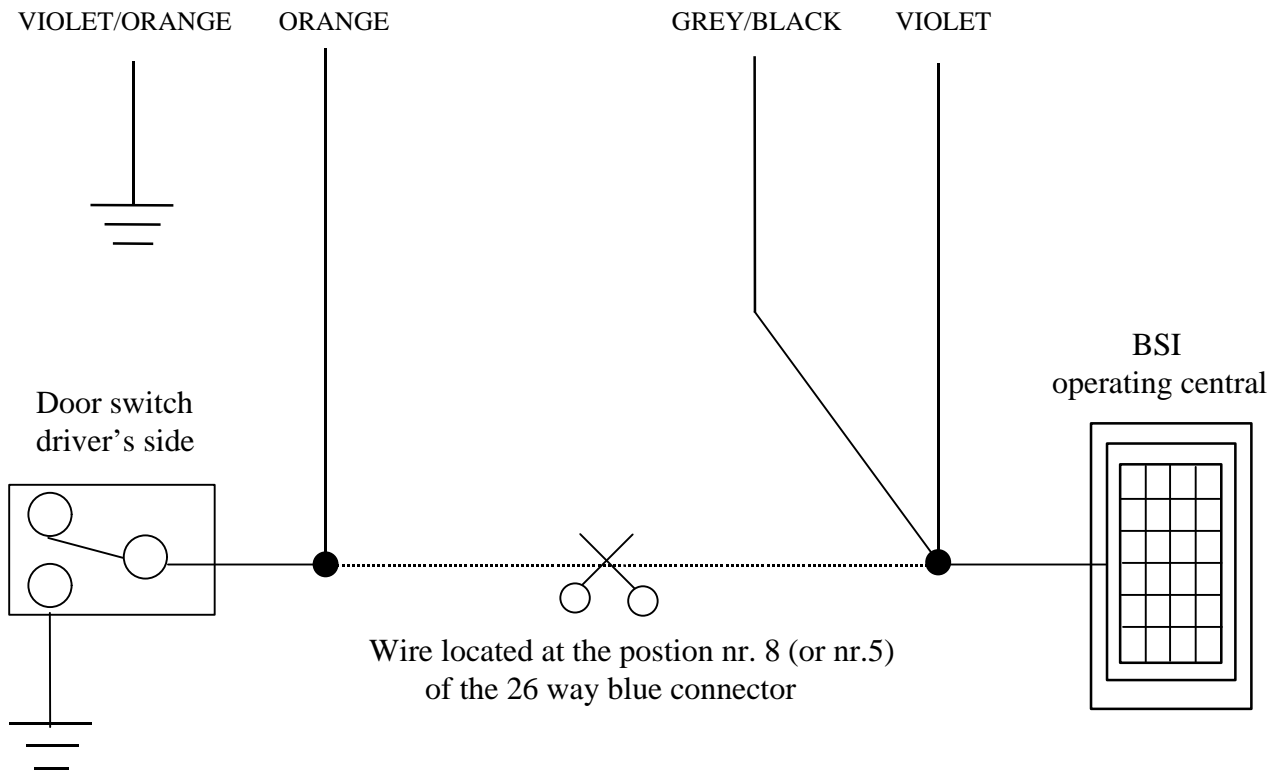

**The BSI operating central is located under the driver's side fuse box.**



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 88A

Diagram to make the central locking on  
**PEUGEOT 206-406-406 coupè-RANCH**  
(for 3100 serie antithefts)

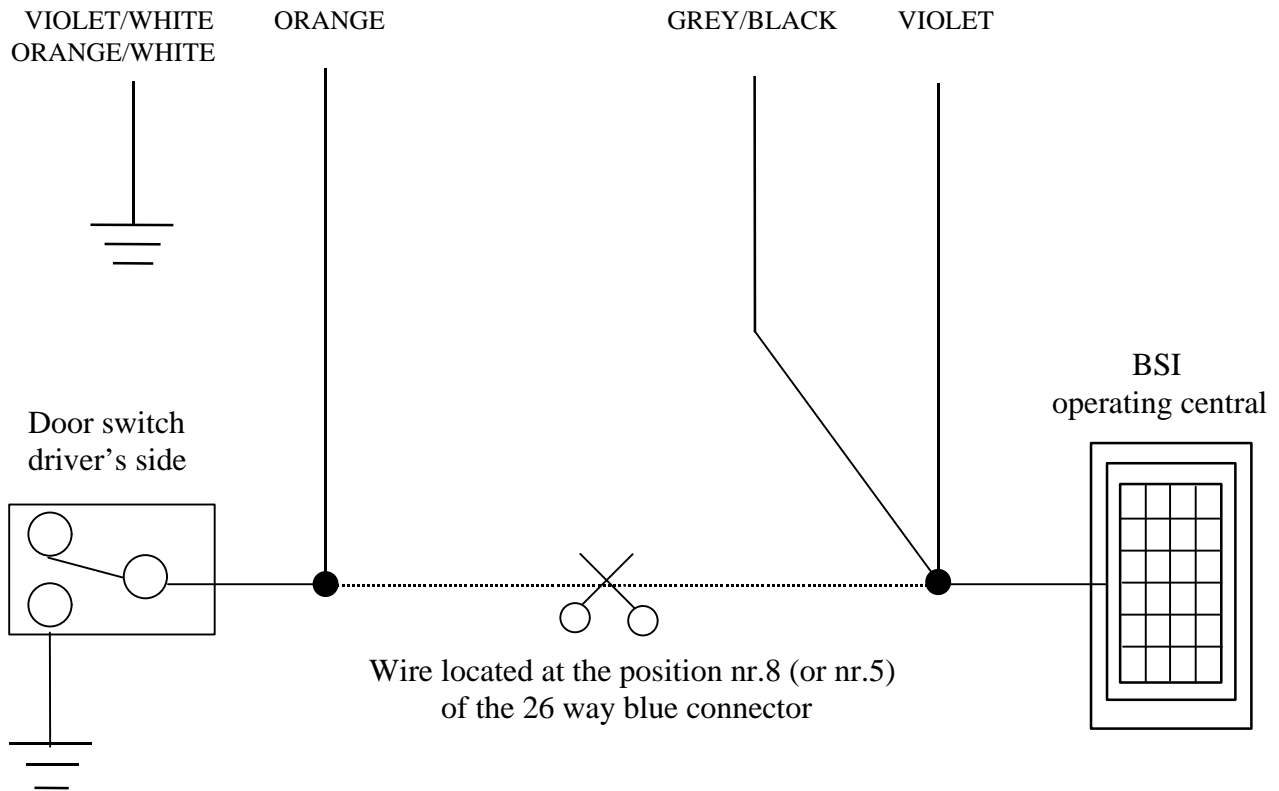

**The BSI operating central is located under the driver's side fuse box.**