



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	PEUGEOT	MOD.	206	YEAR	98 →	PETROL	<input checked="" type="checkbox"/>
						DIESEL	<input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the left in the engine compartment, on the passenger's side wheelhouse.						
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire located in the general power supply of the fuse box. - 31: connect with a cable terminal directly to the car body.						
IGNITION WIRE	+ 15/54: connect to the wire located at the position nr. 4 of the 26 way blue connector coming out of the central unit, under the steering column.						
DIRECTION INDICATORS	Connect to the wires located at the positions nr. 10 and nr. 11 of the 16 way black connector coming out of the central unit, under the steering column.						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the 1,5 mm ² LIGHT BROWN wire. Front window, passenger's side: cut the 1,5 mm ² RED wire. Such connections should be made in the wiring harnesses coming out of the respective original switches for the window closing.						
CENTRAL DOORS LOCKING	Negative control signal Follow the diagram nr. 52 for Bridge serie antithefts, cut the wire located at the position nr. 10 coming out of the 26 way blue connector of the central unit, under the steering column. For the 3100 serie antithefts follow the diagram nr. 52A cutting the same wire mentioned above.						
IMMOBILISATION POINT 1	Fuel pump Cut the VIOLET wire located in the wiring harness behind the plastic bulkhead of the driver's side sill cover.						
IMMOBILISATION POINT 2	Inertial switch Cut the BROWN wire located in the wiring harness coming out of the 2 way connector directly on the way off the inertial switch placed on the support of the shock absorber, driver's side, in the engine compartment.						
STARTER	+50: Cut the BLUE wire located in the wiring harness coming out of the connector of the ignition key.						
BONNET SWITCH	Install an additional switch on the headlamp support plate, near the rubber bonnet stop.						
DOORS SWITCH	Connect to the wire located at the position nr. 8 of the 26 way blue connector coming out of the central unit, under the steering column.						
BOOT SWITCH	Connect to the wire of the boot lamp directly coming out of the same.						




CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 52

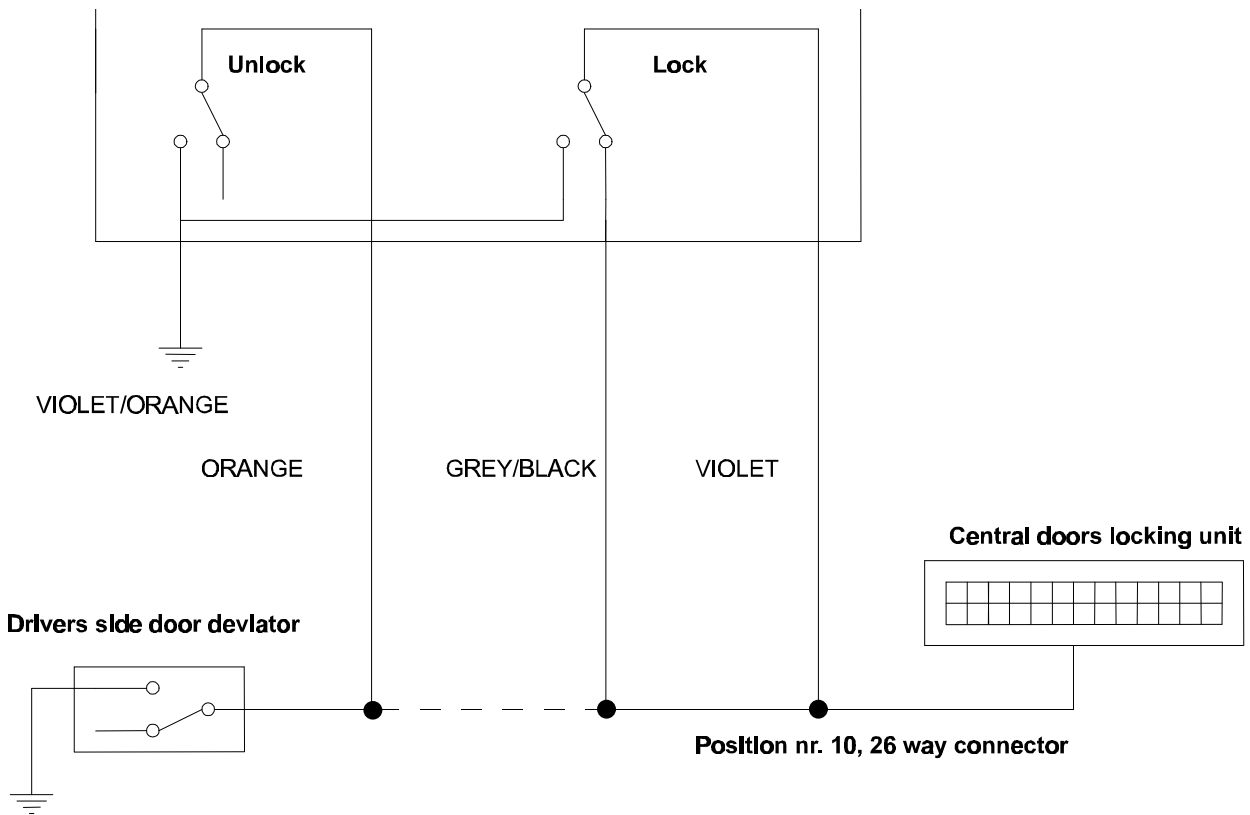

It is necessary to make above connection to lock the doors. The wire mentioned above is located at the position nr.10 in the 26 way blue connector of the central unit of the vehicle, under the driver's side dashboard near the steering column.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 52A

Diagram to make the central door's locking on
PEUGEOT 206
(for 3100 serie antithefts)

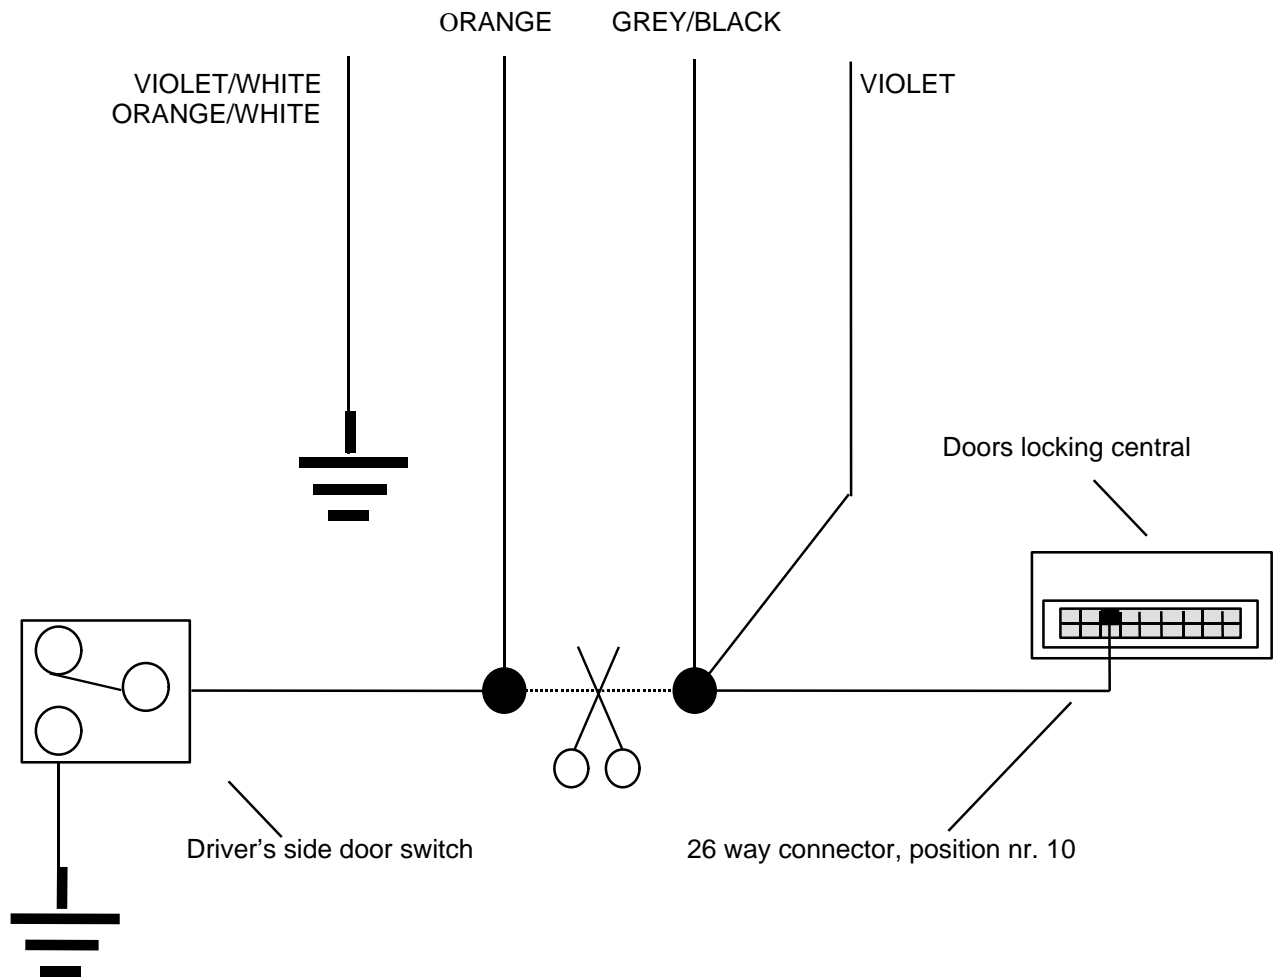

To make the doors locking it is necessary to do the above connection. The 0,35mm² wire signaled is located at the position nr.10 in the wiring harness coming out of the 26 way blue connector of the operating central of the vehicle located in the lower part of the driver's side dashboard, near the steering column.