



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

PEUGEOT

MOD.

206 CC

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment on the support located on the left of the driver's side shock absorber column.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

POWER SUPPLY

+ 30: connect to the 3 mm² RED supply wire of the BSI operating central.
- 31: connect directly with a cable terminal to the car body. As alternative, connect directly to the negative pole of the battery.

IGNITION WIRE

+ 15/54: connect to the wire located at the position nr. 4 of the 26 way light blue connector coming out of the BSI operating central.

DIRECTION INDICATORS

Connect to the wires located at the positions nr. 10 and nr.11 in the 16 way black connector coming out of the BSI operating central.

ELECTRIC WINDOWS

Negative control signal

Windows with automatism

To make the windows locking it is necessary to transmit a negative control. For the autodriven Bridge serie antithefts it is sufficient to connect the BROWN/WHITE wire as per the **A section** of the **diagram nr. 92**. For the no autodriven Bridge serie antithefts and the 3100 serie central units it is necessary to utilize the temporized relay art. 1055 as per the **B section** of the **diagram nr. 92**.

CENTRAL DOORS LOCKING

Negative control signal

Refer to the **diagram nr. 88** for the antithefts of the Bridge serie and to the **diagram nr. 88A** for the antithefts of the 3100 serie.

IMMOBILISATION POINT

Fuel pump

Cut the wire marked nr. 121 located under the relay holder box in the engine compartment; as alternative, the same wire is located in the wiring harness behind the driver's side sill cover.

STARTER

+ 50: Cut the activation control wire of the relay of the starter located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS AND BOOT SWITCH

Connect to the wire located at the position nr. 14 of the 26 way BSI operating central.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 88

Diagram to make the central locking on
PEUGEOT 206-406-406 coupè-RANCH
(for Bridge serie antithefts)

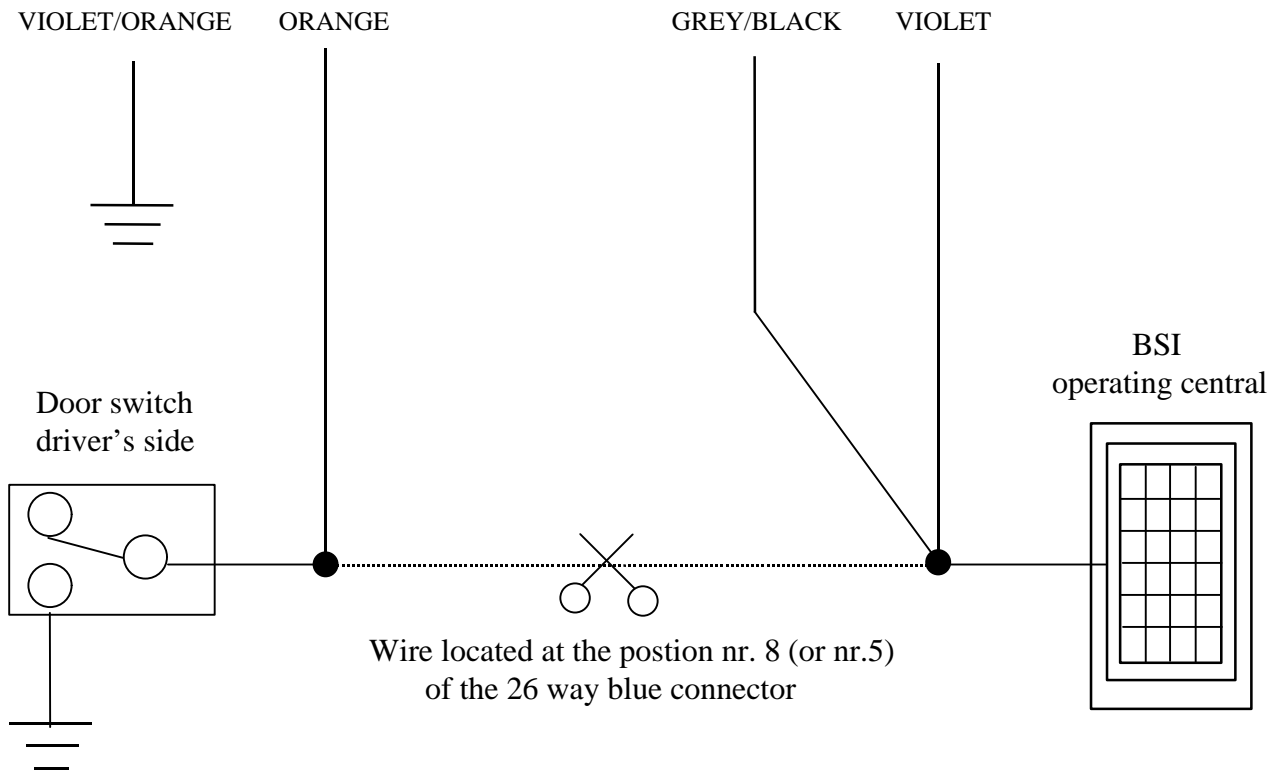

The BSI operating central is located under the driver's side fuse box.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N° 88A

Diagram to make the central locking on
PEUGEOT 206-406-406 coupè-RANCH
(for 3100 serie antithefts)

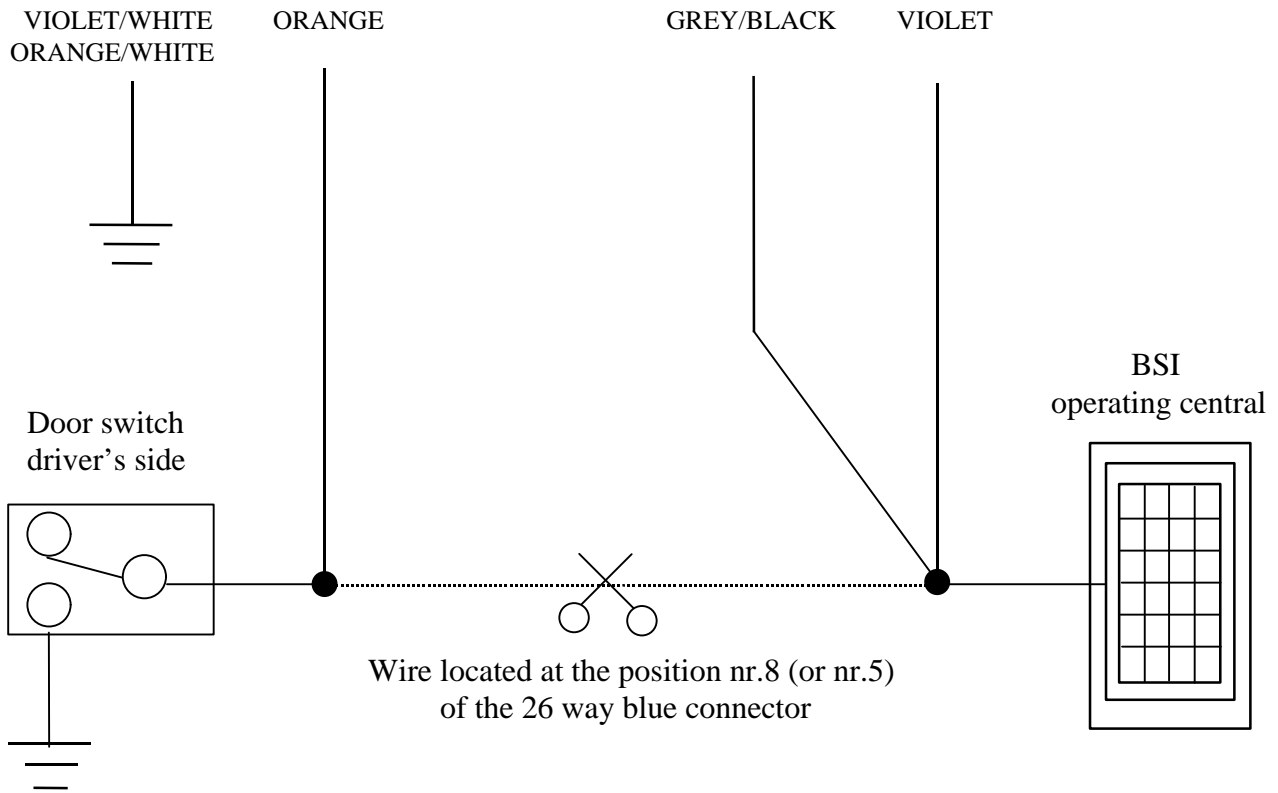

The BSI operating central is located under the driver's side fuse box.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

FITTING DIAGRAM N° 92

Diagram to make the windows locking with automatism on
PEUGEOT 206 CC

A section

Autodriven Bridge serie antithefts (with BROWN/WHITE wire)

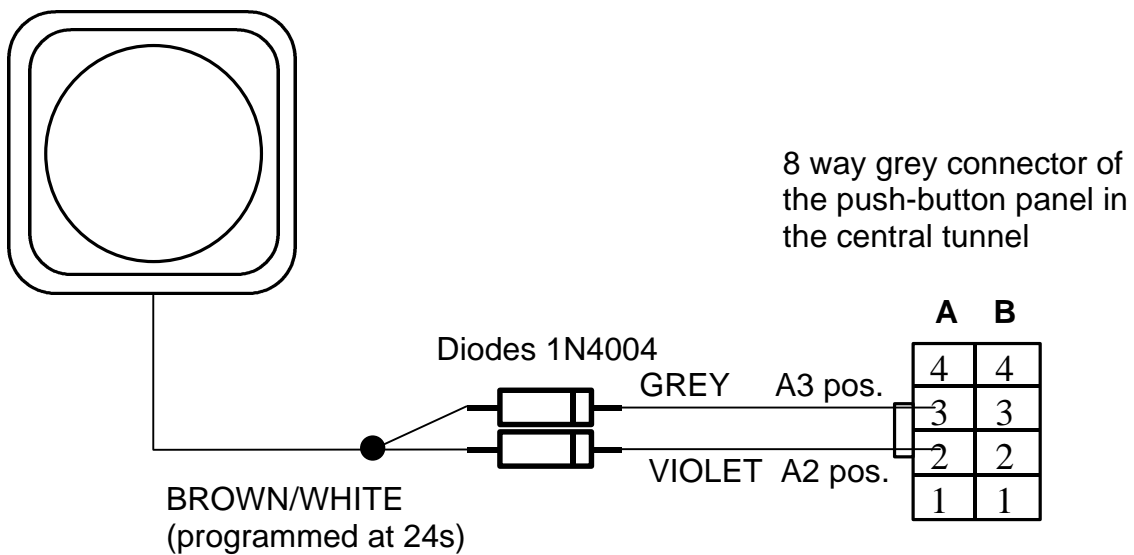

B section

No autodriven Bridge serie antithefts, 3800 serie and 3100 serie centrals
(with BROWN wire)

Temporized relè

