



## CAR SECURITY

### SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

**PEUGEOT**

MOD.

**206 CC\***

YEAR.

**01** →

PETROL  
DIESEL



\* Models with original equipment keyless entry system.

#### ALARM/SIREN POSITION

Position the compact alarms and the sirens in the engine compartment on the member located on the left of the driver's side shock absorber column.

#### CENTRAL UNIT POSITION

Position the modular systems and the modules under the dashboard, driver's side.

#### POWER SUPPLY

+ **30**: connect to the 3 mm<sup>2</sup> RED supply wire of the BSI operating central.  
- **31**: connect directly with a cable terminal to the car body. As alternative, connect directly to the negative pole of the battery.

#### IGNITION WIRE

+ **15/54**: connect to the wire located at the position nr. 4 of the 26 way light blue connector coming out of the BSI operating central.

#### DIRECTION INDICATORS

Connect to the wires located at the positions nr. 10 and nr.11 in the 16 way black connector coming out of the BSI operating central.

#### ELECTRIC WINDOWS

##### Negative control signal Windows with automatism

To make the windows locking it is necessary a negative control. For the 3800 serie antithefts it is necessary to utilize a temporized relay art. 1055 as per the **B section** of the **diagram nr. 92**.

#### ACTIVAT./DEACTIVATION CONTROLS

##### Connections antithefts/vehicle

Refer to the **diagram nr. 94**.

#### IMMOBILISATION POINT

##### Fuel pump

Cut the wire marked nr. 121 located under the relay holder box, in the engine compartment; as alternative the same wire is located in the wiring harness behind the driver's side sill cover.

#### STARTER

+ **50**: Cut the activation control wire of the relay of the starter located in the wiring harness coming out of the connector of the ignition key.

#### BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

#### DOORS AND BOOT SWITCH

Connect to the wire located at the position nr. 14 of the 26 way BSI operating central.



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

FITTING DIAGRAM N° 92

Diagram to make the windows locking with automatism on  
**PEUGEOT 206 CC**

**A section**


Autodriven Bridge serie antithefts (with BROWN/WHITE wire)

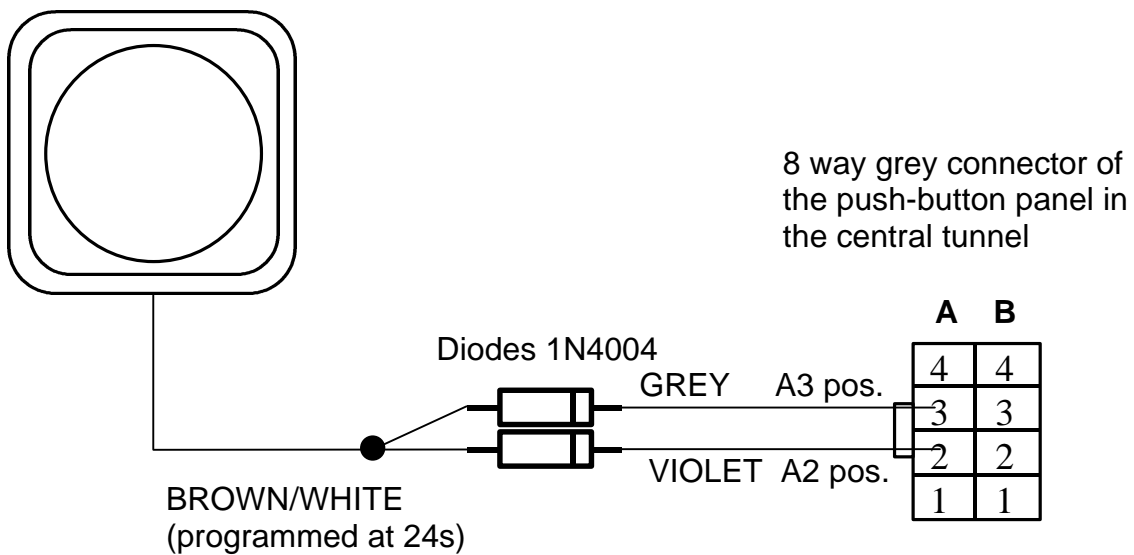

**B section**

No autodriven Bridge serie antithefts, 3800 serie and 3100 serie centrals (with BROWN wire)

Temporized relè

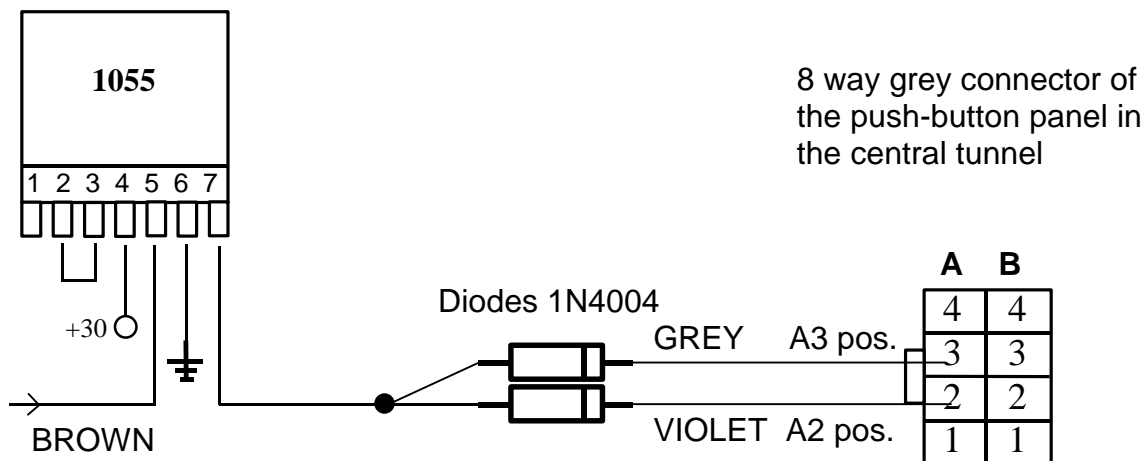



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00


www.cobra.it

FITTING DIAGRAM N° 94

Diagram for the interfacing of art. 3800 on  
**PEUGEOT 206**

BSI operating central under the fuse box

Art. 3800

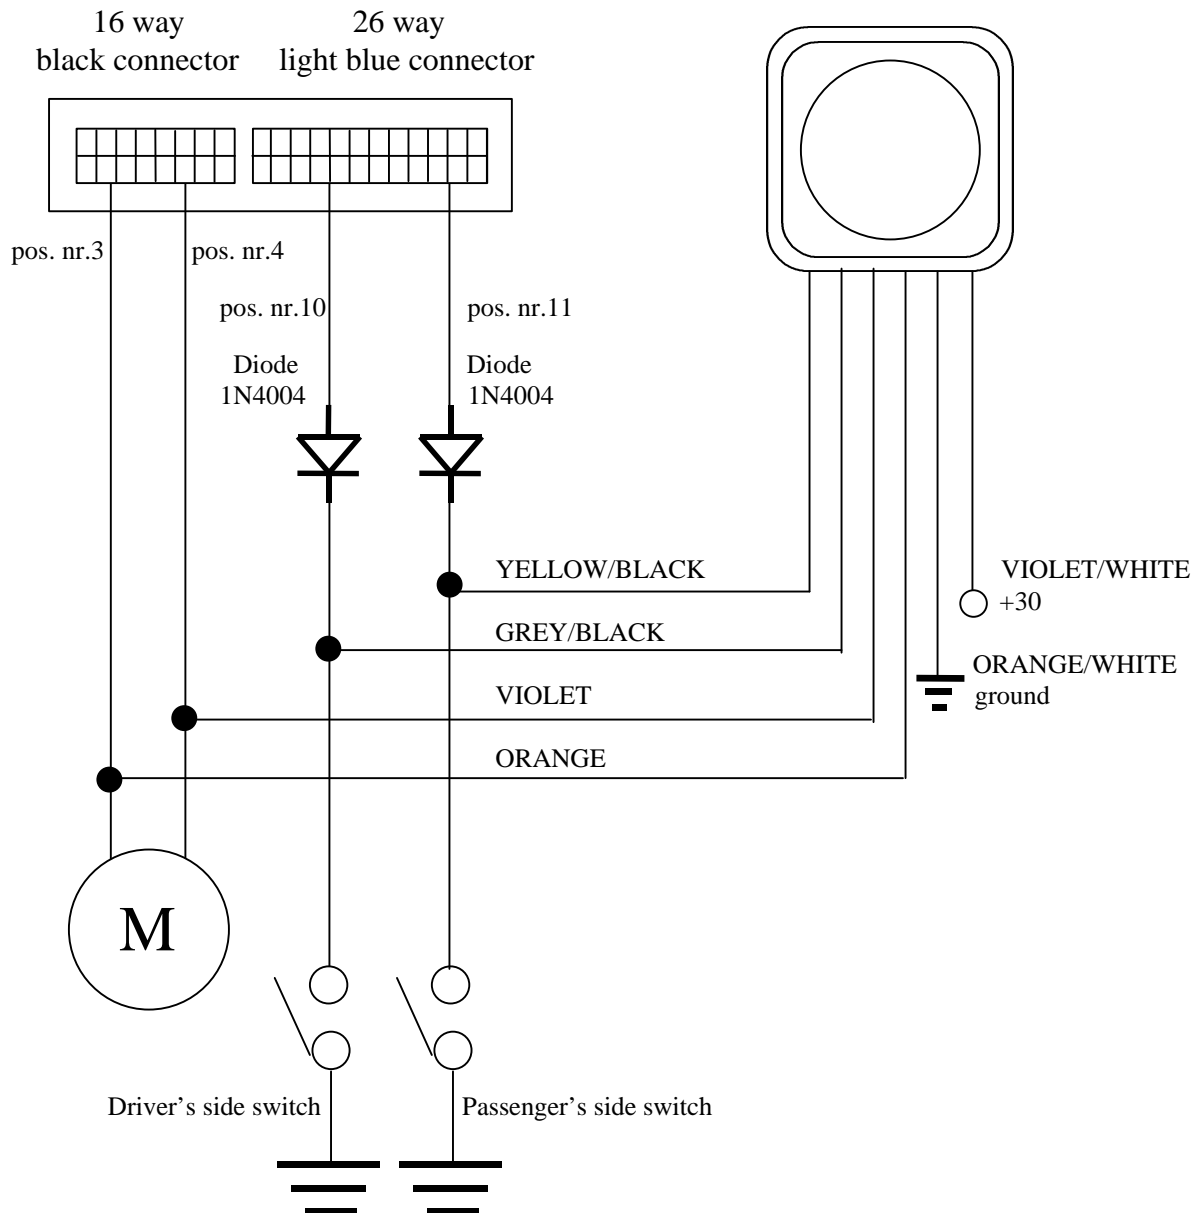

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.