

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

REV. 00

	ОТ	MOD.	306	YEAR	98 →	PETROL DIESEL	□ x
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment, between the battery and the driver's side headlamps. To pass the cables use the original rubber sleeve located under the driver's side wheelhouse.						
POWER SUPPLY	 + 30: connect to the wire located in a multiway connector directly in the fuse box. - 31: connect with a cable terminal to one of the original ground bolts located behind the left lateral panel, driver's side. 						
IGNITION WIRE	+ 15/54: connect to the YELLOW wire marked CC2 located in a multiway connector in the fuse box.						
DIRECTION INDICATORS	Connect to the RED wire marked nr. 2330 at the position A4 and to the GREEN wire marked nr. 2340 at the position A2 located in the wiring harness coming out of the 9 way black connector under the steering column.						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the 2 mm ² wire nr. 604 located in the wiring harness coming out of the switch of the respective window. Front window, passenger's side: cut the 2 mm ² wire nr. 606 located in the wiring harness coming out of the respective window.						
CENTRAL DOORS LOCKING	 Negative control signal Connect to the 0,5 mm² RED or BLUE wire marked nr. 627 at the position nr. 6 (unlock) and to the WHITE wire marked nr. 628 at the position nr. 7 (lock) located in the wiring harness coming out of the 13 way blue connector on the right of the left lateral panel, driver's side. 2nd possibility Connect to the 0,5 mm² YELLOW wire marked nr. 627 at the position B6 (unlock) and to the WHITE wire marked nr. 628 at the position B8 located in the wiring harness coming out of the 13 way white connector, behind the fuse box. 						
IMMOBILISATION POINT	Gasoil pump Cut the RED wire located in the 4 way black connector, in the electrovalve in the engine compartment.						
BONNET SWITCH	Install an additional switch on the headlamp support plate, in correspondence with the driver's side headlamp.						
DOORS SWITCH	Connect to the GREEN wire marked nr. 30 or nr. 304 located in the wiring harness coming out of the central doors locking unit, alternatively connect to the WHITE wire marked nr. 300 or nr. 304 at the position 2B in the wiring harness coming out of the 13 way white connector, in the fuse box.						
BOOT SWITCH			LIGHT BLUE wire Id ly in the boot lamp.		wiring harnes	s coming out	of the

pe30698gbd.doc