



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	PEUGEOT	MOD.	406	YEAR.	01 →	PETROL <input checked="" type="checkbox"/>	DIESEL <input type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment on the support located on the left of the shock absorber column, driver's side.						
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.						
POWER SUPPLY	+ 30: connect to the 3 mm ² GREY wire located in the wiring harness coming out of the 2 way grey connector of the BSI central unit. - 31: connect directly to the car body.						
IGNITION WIRE	+ 15/54: connect to the VIOLET wire at the position nr. 22 of the 26 way light blue connector of the BSI central unit.						
DIRECTION INDICATORS	Connect to the wires at the positions nr. 14 and nr. 15 of the 16 way black connector of the BSI operating central.						
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: Give a 12s positive pulse to the wire located at the position nr.12 in the 16 way black connector of the push-button panel inside the driver's side armrest. Front window, passenger's side: cut the 2 mm ² GREY wire located at the position nr. 10 of the 16 way black connector of the push-button panel inside the driver's side armrest. Rear window, driver's side: Cut the 2 mm ² VIOLET wire located at the position nr. 7 of the 16 way black connector of the push-button panel inside the driver's side armrest. Rear window, passenger's side: cut the 2 mm ² GREY wire at the position nr. 6 of the 16 way black connector of the push-button panel inside the driver's side armrest.						
CENTRAL DOORS LOCKING	Negative control signal Refer to the diagram nr. 88 for the antithefts of the Bridge serie. Refer to the diagram nr. 88A for the antithefts of the 3100 serie.						
IMMOBILISATION POINT	Fuel pump Cut the WHITE wire marked nr. 122 located in the wiring harness behind the driver's side sill cover.						
STARTER	+50: Cut the activation control wire of the relay of the starting motor located in the wiring harness coming out of the connector of the ignition key.						
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.						
DOORS SWITCH	Connect to the GREEN wire located at the position nr. 16 of the 26 way light blue connector of the BSI operating central.						
BOOT SWITCH	Connect to the wire marked nr. 319 directly in the wiring harness coming out of the boot lamp.						



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°88

Diagram to make the central locking on **PEUGEOT 206-406-406 coupè-RANCH** (for Bridge serie antithefts)

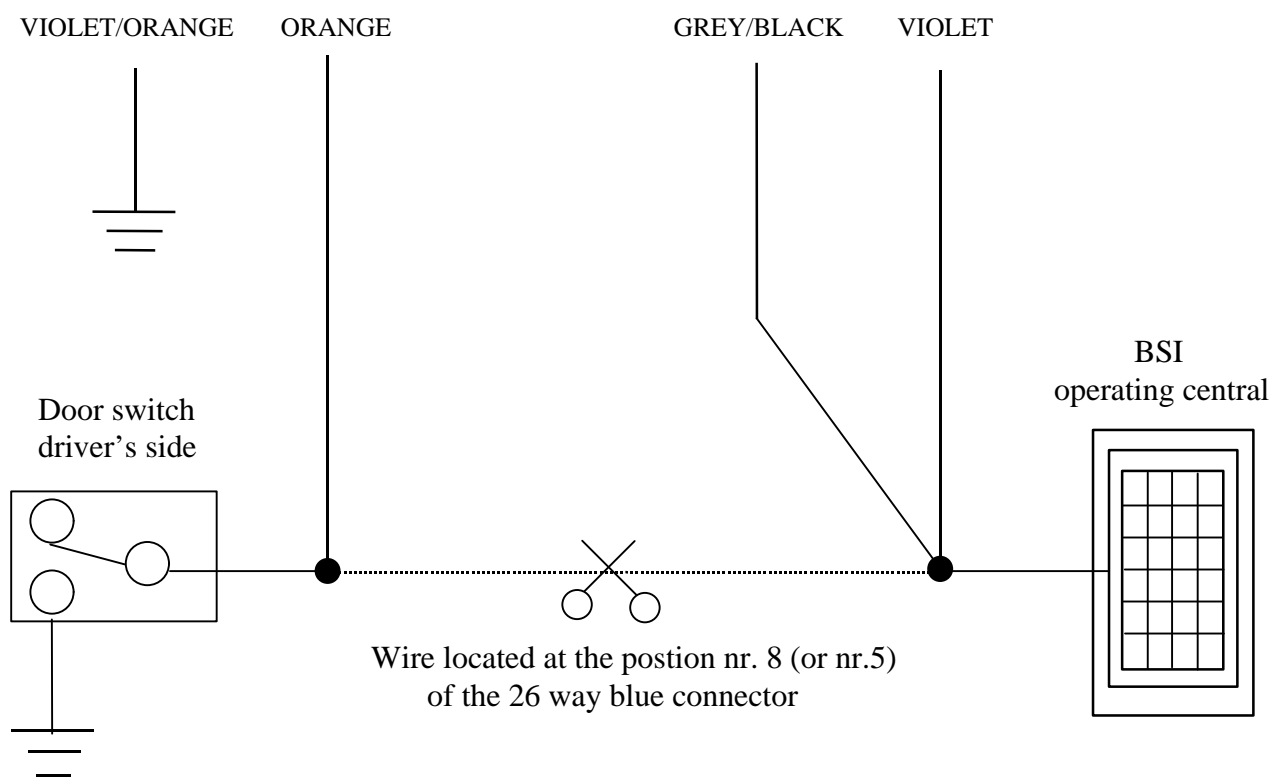

The BSI operating central is located under the driver's side fuse box.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°88A

Diagram to make the central locking on **PEUGEOT 206-406-406 coupè-RANCH** (for 3100 serie antithefts)

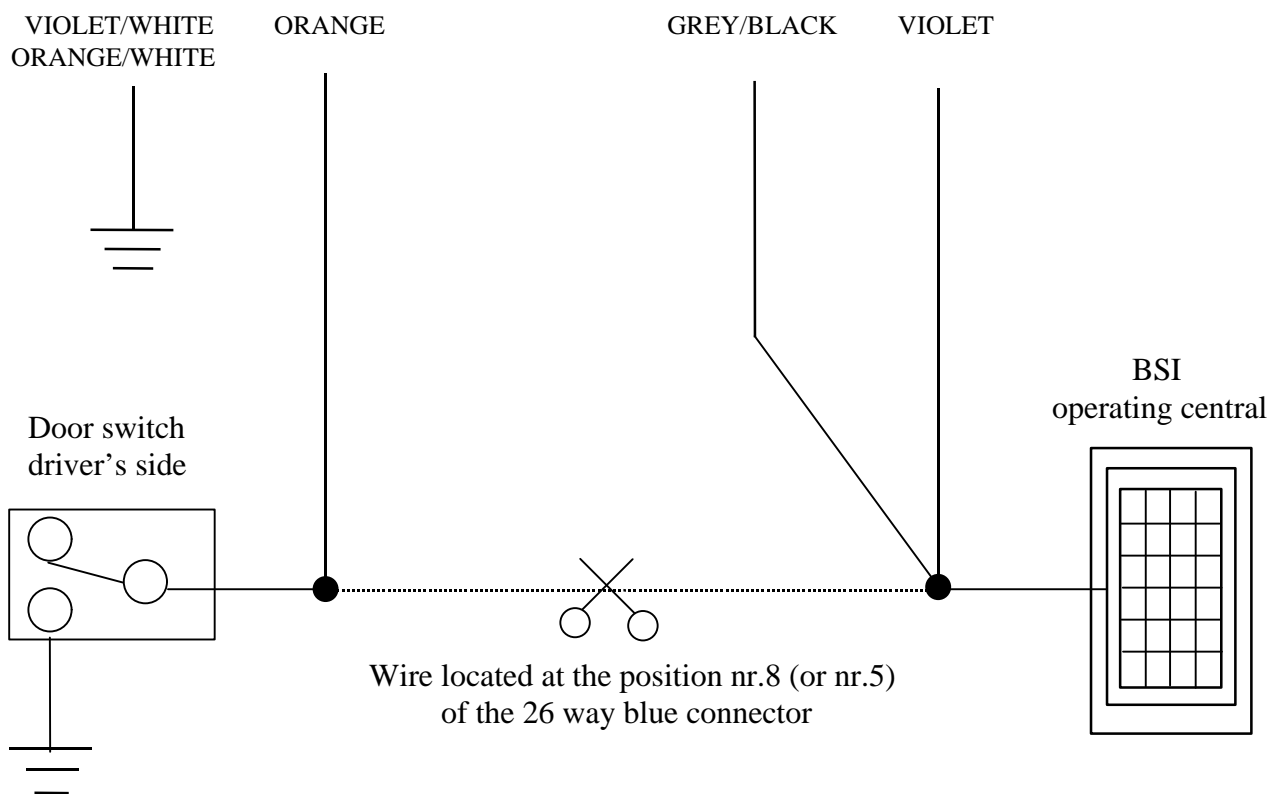

The BSI operating central is located under the driver's side fuse box.