

## CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

**REV. 00** 

	от	MOD.	406*	YEAR.	01 –	PETROL	X	
* Models with original equipment keyless entry system.								
ALARM/SIREN POSITION	Position the compact alarms and the sirens in the engine compartment on the support located on the left of the shock absorber column, driver's side.							
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.							
POWER SUPPLY	<ul> <li>+ 30: connect to the 3 mm<sup>2</sup> GREY wire located in the wiring harness coming out of the 2 way grey connector of the BSI central unit.</li> <li>- 31: connect directly to the car body.</li> </ul>							
IGNITION WIRE	+ 15/54: connect to the VIOLET wire at the position nr. 22 of the 26 way light blue connector of the BSI central unit.							
DIRECTION INDICATORS		Connect to the wires at the positions nr. 14 and nr. 15 of the 16 way black connector of the BSI operating central.						
ELECTRIC WINDOWS	<ul> <li>Positive control signal</li> <li>Front window, driver's side:</li> <li>Give a 12s positive pulse to the wire located at the position nr.12 in the 16 way black connector of the push-button panel inside the driver's side armrest.</li> <li>Front window, passenger's side:</li> <li>cut the 2 mm<sup>2</sup> GREY wire located at the position nr. 10 of the 16 way black connector of the push-button panel inside the driver's side armrest.</li> <li>Rear window, driver's side:</li> <li>Cut the 2 mm<sup>2</sup> VIOLET wire located at the position nr. 7 of the 16 way black connector of the push-button panel inside the driver's side armrest.</li> <li>Rear window, passenger's side:</li> <li>cut the 2 mm<sup>2</sup> GREY wire at the position nr. 6 of the 16 way black connector of the push-button panel inside the driver's side armrest.</li> </ul>							
ACTIVAT./DEACTIVATION CONTROLS	Connections antithefts/vehicle Refer to the diagram nr. 89.							
IMMOBILISATION POINT	<b>Fuel pump</b> Cut the WHITE wire marked nr. 122 located in the wiring harness behind the driver's side sill cover.							
STARTER	+50: Cut the activation control wire of the relay of the starting motor located in the wiring harness coming out of the connector of the ignition key.							
BONNET SWITCH	Install an additional switch on the headlamp support plate, driver's side.							
DOORS SWITCH	Connect to the GREEN wire located at the position nr. 16 of the 26 way light blue connector of the BSI operating central.							
BOOT SWITCH	Connect lamp.	to the wire ma	arked nr. 319 direct	ly in the wiring	g harness o	coming out of th	ne boot	

pe40601gbbt.doc

