



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

MAKE

PEUGEOT

MOD.

RANCH

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the support located on the left of the shock absorber column, driver's side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the fuse box, driver's side.

POWER SUPPLY

+ 30: connect to the 3 mm² RED wire located in the general supply connector of the BSI central.
- 31: connect directly with a cable terminal to the car body.

IGNITION WIRE

+ 15/54: connect to the WHITE wire located at the position nr. 22 of the 26 way blue connector coming out of the BSI central.

DIRECTION INDICATORS

Connect to the YELLOW wire at the position nr. 14 and to the WHITE wire at the position nr.15 of the 16 way black connector coming out of the BSI operating central.

ELECTRIC WINDOWS

Positive control signal

Front window, driver's side:

cut the 2 mm² WHITE wire located in the wiring harness coming out of the central of windows automatism placed on the side of the central tunnel, above the acceleration pedal.

Front window, passenger's side:

cut the 2 mm² LIGHT BLUE wire located in the wiring harness coming out of the original push button placed in the central tunnel.

CENTRAL DOORS LOCKING

Negative control signal

Refer to the **diagram nr. 88** for the antithefts of the Bridge serie. Refer to the **diagram nr. 88A** for the antithefts of the 3100 serie.

IMMOBILISATION POINT

Gasoil pump

Cut the LIGHT BLUE wire marked nr. 121 located under the relay holder box, in the engine compartment; as alternative, the same wire is located in the wiring harness behind the driver's side sill cover.

STARTER

+ 50: Cut the activation control wire of the relay of the starter located in the wiring harness coming out of the connector of the ignition key.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the GREEN wire located at the position nr. 17 coming out of the 26 way blue connector of the BSI operating central.

BOOT SWITCH

Connect to the GREY wire located at the position nr. 12 coming out of the 26 way blue connector of the BSI operating central.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N°88

Diagram to make the central locking on
PEUGEOT 206-406-406 coupè-RANCH
(for Bridge serie antithefts)

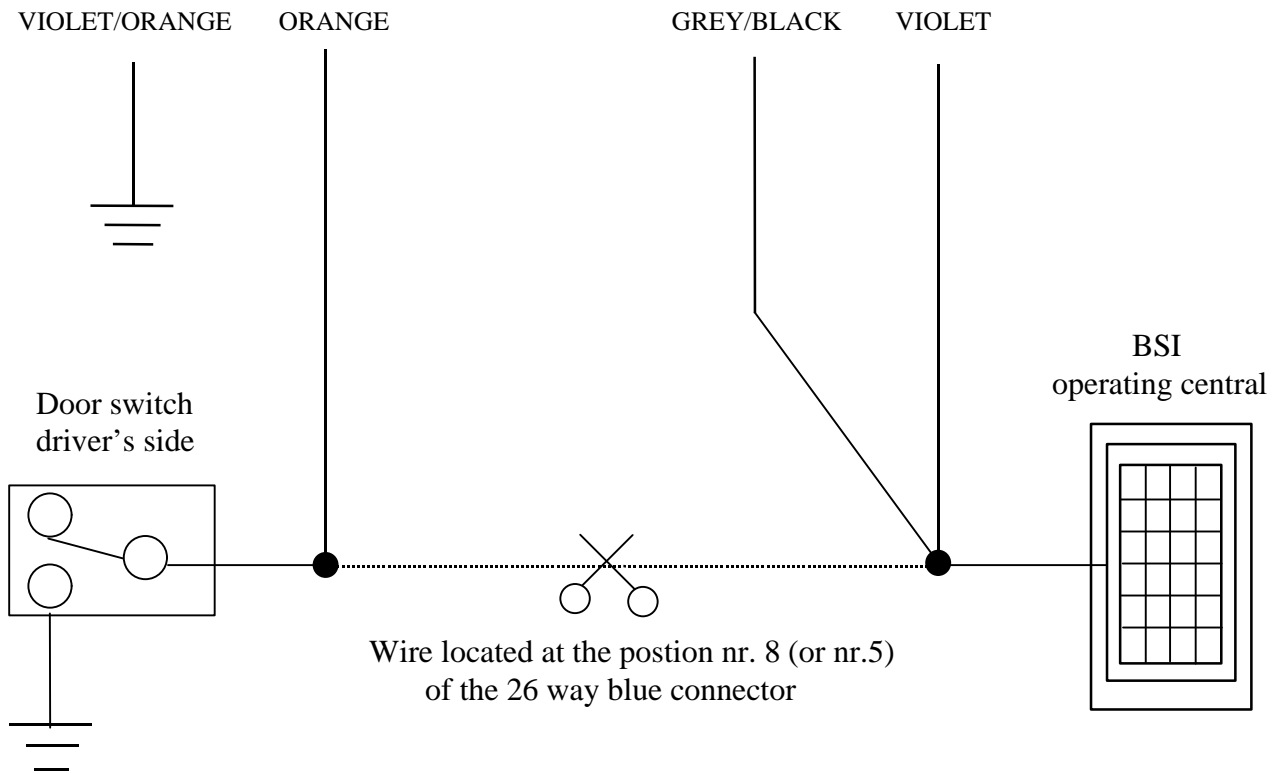

The BSI operating central is located under the driver's side fuse box.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

FITTING DIAGRAM N°88A

Diagram to make the central locking on
PEUGEOT 206-406-406 coupè-RANCH
(for 3100 serie antithefts)

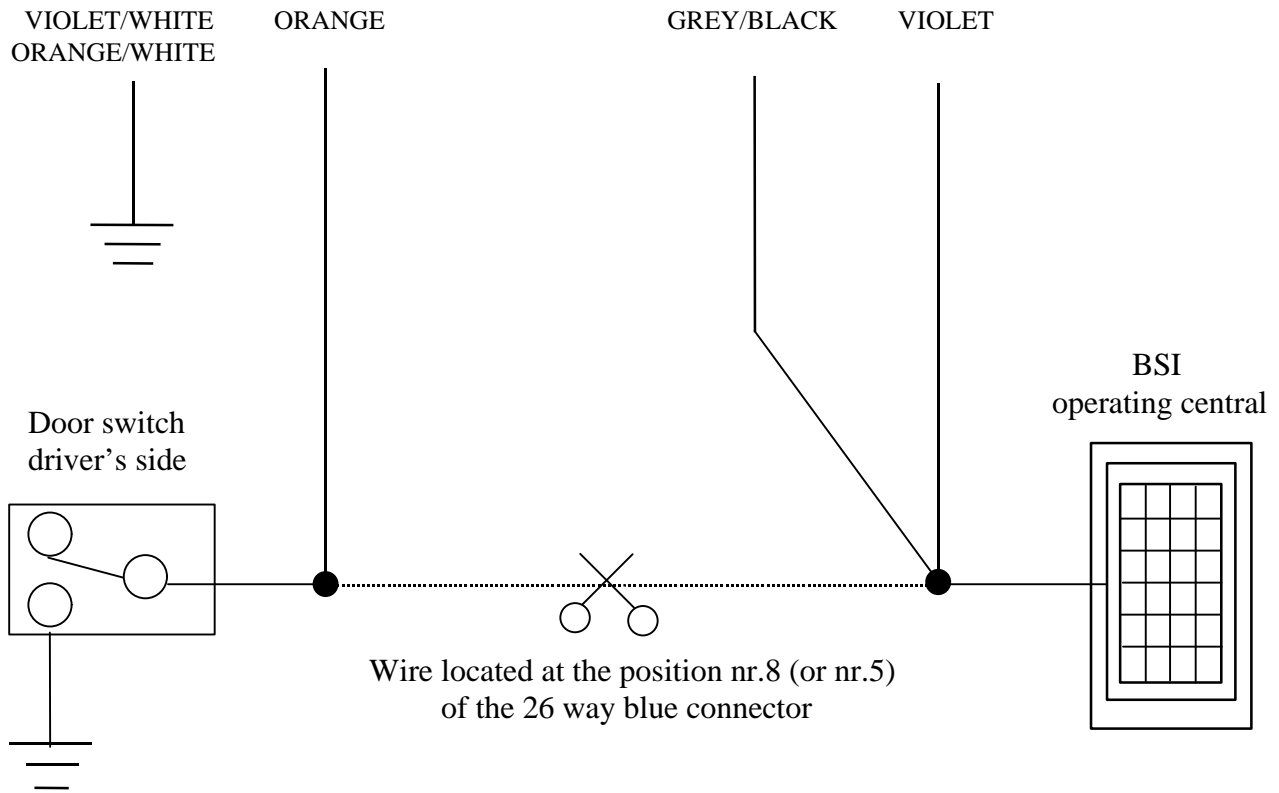

The BSI operating central is located under the driver's side fuse box.