

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS


REV. 00

	IC VEHICLE ALARIVI FITTING INS	TRUCTIONS	KEV. 00
www.cobra.it			
MAKE PEUGEO	RANCH*	YEAR 03 →	PETROL ⊻ → DIESEL □
* Models with original equipment keyless	entry system.		
ALARM/SIREN POSITION	Position the compact alarms and the sirer	ns in the driver's side	windshield wiper.
CENTRAL UNIT POSITION	Position the modular sistems and the modules under the dashboard, driver's side.		
POWER SUPPLY	 +30: connect to the PINK wire in the 3 way blue connector coming out of the ignition key. -31: connect to the original ground socket located behind the left lateral bulkhead, driver's side. 		
IGNITION WIRE	+15/54: connect to the YELLOW wire in the ignition key.	the 3 way blue conn	ector coming out o
DIRECTION INDICATORS	Connect to the wires at the positions nr.13 and nr.14 located in the 16 way black connector in the fuse box.		
ELECTRIC WINDOWS	This information is not available at the moment.		
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicle Refer to the fitting diagram nr.183.		
IMMOBILISATION POINT	Fuel pump Cut the ORANGE wire at the position nr.16 in the 16 way black connector located in the right fuse holder box, in the engine compartment.		
STARTER	+50: Cut the RED wire in the 3 way blue of	connector coming out	of the ignition key.
BONNET SWITCH	Install an additional switch on the he bumper rubber.	adlamp support plat	e, near the bonne
DOORS SWITCH	Connect to the wire at the position nr.32 white cover, in the BSI central, in the fuse NOTE: this is a positive control.		way connector with
BOOT SWITCH	Connect to the GREY wire at the posit connector in the fuse box.	tion nr.12, coming o	out of the multiway

Note: This information is not binding, therefore it must be considered only an example for installation purposes that must be executed as per the instructions given on the product installation manual.

peran03gbbt.doc



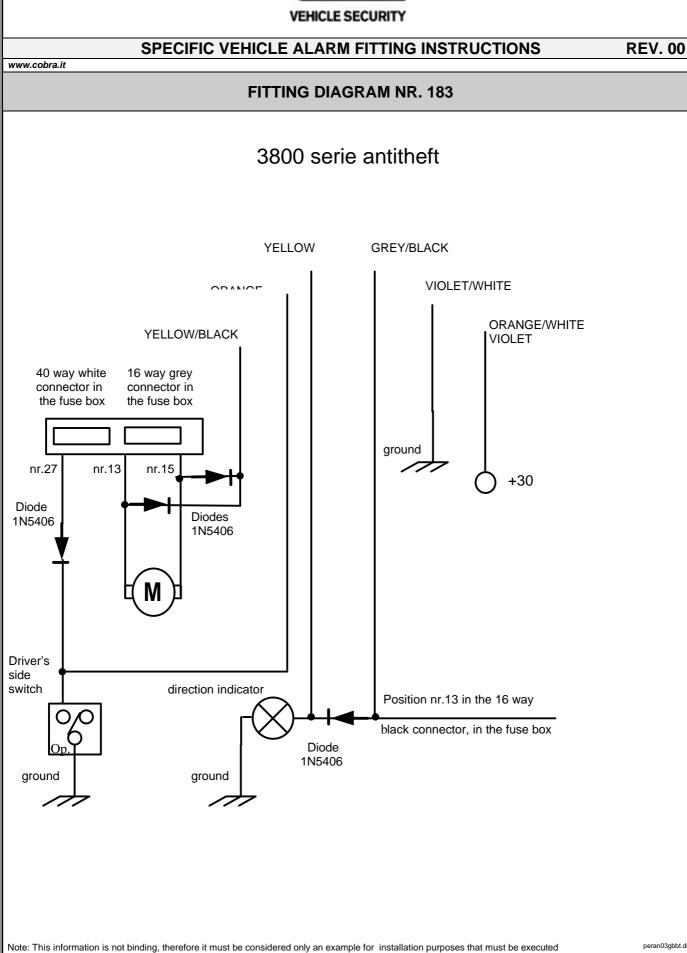

peran03gbbt.doc