



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **PORSCHE** MOD. **996*** YEAR **03** → PETROL DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens on the driver's side wheelhouse, in the engine compartment.
- CENTRAL UNIT POSITION** Position the modular systems and the modules under the central tunnel or under the passenger's side seat.
- POWER SUPPLY** **+30:** connect directly to the positive pole of the battery.
-31: connect with a cable terminal directly to the ground terminal located behind the driver's side sill cover.
- IGNITION WIRE** **+15/54:** connect to the 1,5 mm² BLACK wire located in the wiring harness on the side of the fuse box coming out of the ignition key; as alternative directly in the connector coming out of the ignition key.
- DIRECTION INDICATORS** Connect to the BLACK/WHITE and BLACK/GREEN wires located in the wiring harness coming out of the connector coming out of the operating central placed under the driver's side seat.
- ACTIVAT./DEACTIVATION CONTROLS**
- | Connections antitheft/vehicle | | |
|--------------------------------------|----------------|---|
| Art. 3800 | Vehicle | Position |
| GREY/BLACK | BLUE/YELLOW | Pos. nr.9, 12 way black connector. |
| YELLOW/BLACK | GREEN/RED | Pos. nr.3, 12 way black connector. |
| VIOLET/WHITE | Ground | Car body |
| VIOLET | BLACK/GREEN | Wiring harness on the side of the fuse box. |
| ORANGE | Ground | Car body |
| ORANGE/WHITE | Ground | Car body |
- The 12 way black connector is located on the coming out of the central under the driver's side seat. Refer to the "A" diagram in the dedicated installation manual inside the kit of the antitheft.
- IMMOBILISATION POINT** **Fuel pump**
Cut the 2 mm² RED/WHITE wire at the position nr.4, of the "C" line coming out of the relay pump connector, in the fuse box. It is suggested to install an additional relay.
- STARTER** **+50:** Cut the BLACK wire in the wiring harness coming out of the connector of the ignition key.
- BONNET SWITCH** Connect to the BROWN/LIGHT BLUE wire in the wiring harness coming out of the boot lamp.
- DOORS SWITCH** Connect to the YELLOW/BROWN wire in the wiring harness coming out of the driver's side door.
- BOOT SWITCH** Connect to the GREY/BLACK wire at the position nr.1, in the 40 way light blue connector, coming out of the central placed behind the left side covering, in the front boot.
- HORN CONTROL** **Negative control**
Connect to the WHITE/BROWN wire, in the wiring harness coming out of the connector of the relay marked nr. 53, located under the driver's side dashboard.