

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

MAKE PORSC	
* Models with original equipment ke	yless entry system
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the driver's side wheelhouse.
CENTRAL UNIT POSITION	Position the modular sistems and the modules under the central tunnel or under the passenger's side seat.
POWER SUPPLY	 +30: connect directly to the positive pole of the battery. -31: connect with a cable terminal directly to the ground terminal located behind the driver's side sill cover.
IGNITION WIRE	+15/54: connect to the 1,5 mm ² BLACK wire located in the wiring harness on the side of the fuse box coming out of the ignition key; as alternative directly in the connector coming out of the ignition key.
DIRECTION INDICATORS	Connect to the BLACK/WHITE and BLACK/GREEN wires located in the wiring harness coming out of the connector coming out of the operating central placed under the driver's side seat.
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicleArt.3800VehiclePositionGREY/BLACKBLUE/YELLOWPos. nr.11, 15 way connector.YELLOW/BLACKGREEN/REDPos. nr.12, 15 way connector.VIOLET/WHITEGroundCar bodyVIOLETBLACK/GREENWiring harness on the side of the fuse boxORANGEGroundCar bodyORANGE/WHITEGroundCar bodyRefer to the A diagramin the dedicated installation manual inside the kit of the antitheft.
IMMOBILISATION POINT	Fuel pump Cut the 2 mm ² RED/WHITE wire at the position nr.4, of the "C" line coming out of the relay pump connector. It is suggested to install an additional relay.
STARTER	+50: Cut the BLACK wire in the wiring harness coming out of the connector of the ignition key.
BONNET SWITCH	Connect to the BROWN/LIGHT BLUE wire in the wiring harness coming out of the boot lamp.
DOORS SWITCH	Connect to the YELLOW/BROWN wire in the wiring harness coming out of the driver's side door.
BOOT SWITCH	Connect to the GREY/BLACK wire at the position nr.1 in the 40 way light blue connector coming out of the central placed behind the left side covering, in the front boot.
HORN CONTROL	Negative control Connect to the WHITE/BROWN wire in the wiring harness coming out of the connector of the relay marked nr.53 located under the driver's side dashboard.

pobox03gbbt.doc