

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV.00

www.cobra.it	
MAKE RENA	
* Models with original equipment keyless entry system.	
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the wheel house, passenger's side.
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.
POWER SUPPLY	 + 30: connect to the RED wire, at the position A3, in the P202 connector, under the dashboard, driver's side. - 31: connect to the BLACK wire, at the position A4, in the P202 connector, under the dashboard, driver's side.
IGNITION WIRE	+ 15/54: connect to the YELLOW /VIOLET wire, at the position A4, in the 15 way P202 white connector located in the central under the dashboard, driver's side.
DIRECTION INDICATORS	Connect to the WHITE/BROWN wire, at the position A3 and to the LIGHT VIOLET/BROWN wire, at the position A2, in the 15 way P203 black connector, in the central placed under the dashboard, driver's side.
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the LIGHT VIOLET wire, at the position B5, in a 15 way white connector, in the central placed under the dashboad, driver's side. Front window, passenger's side: cut the WHITE/ORANGE wire in the bundle of cables coming out of the driver's side door.
ACTIVAT./DEACTIVATION CONTROLS	Connections antitheft/vehicleArt.38XXVehiclePositionGREY/BLACKWHITEPosition B8 black connector.YELLOW/BLACKGREENPosition B4 black connector.ORANGE/WHITE+30In the fuse box.ORANGE+30In the fuse box.VIOLETPINKPosition B1 serial switch.VIOLET/WHITEGroundCar body.The above mentioned black connector is located behind the left lateral bulkhead, near the switch lever.Refer to the B diagramspecified in the dedicated installation manual enclosed in the kit of the antitheft.
IMMOBILISATION POINT	Fuel pump Cut the LIGHT BROWN wire, at the position A2, in the 26 way black connector, fixed behind the driver's side bulkhead.
STARTER	+50: Cut the ORANGE wire located on the ignition key.
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.
FRONT DOORS SWITCH	Connect to the GREEN wire, at the position nr. 40, in the 40 way black connector, in the central under the dashboard driver's side.
REAR DOORS SWITCH	Connect to the GREY wire, at the position nr. 30, in the 40 way black connector, in the central under the dashboard driver's side.
BOOT SWITCH	Connect to the GREEN wire, at the position nr. 39, in the 40 way black connector, in the central under the dashboard driver's side.