



SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE **RENAULT** MOD. **KANGOO*** YEAR **02** →
 PETROL
 DIESEL

* Models with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens in the engine compartment, near the battery. Use the original core hitch located in the windshield wiper.
- CENTRAL UNIT POSITION** Position the modular systems and the modules under the dashboard, driver's side.
- POWER SUPPLY**
 +30: connect to the RED wire in the 15 way white connector, on the central behind the instrument board on the left.
- 31: connect to a ground terminal behind the left lateral bulkhead.
- IGNITION WIRE** **+15/54:** connect to the YELLOW wire, in the 15 way white connector, behind the instrument board on the left.
- DIRECTION INDICATORS** Connect to the ORANGE wires at the positions nr.3 and nr.4, in the 15 way white connector, on the central behind the instrument board, on the left.
- ELECTRIC WINDOWS**
Positive control signal
Front window, driver's side:
 cut the WHITE wire, at the position nr.1, in the green connector on the serial push button inside the driver's side door.
Front window, passenger's side:
 cut the BROWN wire in the wiring harness coming out of the driver's side door.
- ACTIVAT./DEACTIVATION CONTROLS**
Connections antitheft/vehicle

Art. 3800	Vehicle	Position
YELLOW/BLACK	WHITE	pos. A9, 15 way white connector
GREY/BLACK	WHITE	pos. A6, 15 way white connector
VIOLET	BROWN	pos. nr.14, 40 way black connector
ORANGE	ORANGE	pos. nr.13, 40 way black connector
VIOLET/WHITE	ground	car body
ORANGE/WHITE	positive	supply in the fuse box

 The 15 way white connector and the 40 way black connector are located in the central placed behind the instrument board.
 Refer to the "**C**" diagram of the dedicated installation manual inside the kit of the antitheft.
- IMMOBILISATION POINT**
Gasoil pump
 Cut the WHITE wire, in the 2 way black connector on the inertial switch fixed to the driver's side shock absorber, near the positive pole of the battery.
- STARTER** **+50:** Cut the WHITE wire in the 4 way white connector behind the instrument board, on the left.
- BONNET SWITCH** Install an additional switch on the front headlamp support plate, driver's side.
- BOOT AND HATCH SWITCHES** Connect to the PINK wire, at the position A2, in the 15 way white connector, in the central behind the instrument board, on the left.