



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 01

www.cobra.it

MAKE

RENAULT

MOD.

LAGUNA*

YEAR

02 →

PETROL
DIESEL

* Models with original equipment keyless entry system.

ALARM/SIREN POSITION

Position the compact alarms and the sirens in the driver's side wheelhouse compartment, on the left of the boot.

CENTRAL UNIT POSITION

Position the modular systems and the modules in the above mentioned compartment.

POWER SUPPLY

+30: connect to the 1 mm² RED wire, at the position nr.5, of the 6 way connector, located behind the driver's side covering, in the boot.

-31: connect with a cable terminal directly to the original ground cable terminal located in the upper part of the prearrangement of the antitheft.

IGNITION WIRE

+15/54: connect to the 1,5 mm² YELLOW wire, at the position nr.3, of the 6 way black connector, located behind the driver's side covering, in the boot.

DIRECTION INDICATORS

Control for lights of position

Connect to the GREEN wire, at the position nr. 6 of the black connector coming out of the driver's side lights group and to the PINK wire, at the position nr.1, of the black connector, coming out of the passenger's side lights group, in the boot.

ELECTRIC WINDOWS

The control centrals of the windows motors do not allow the connection to make the windows locking.

ACTIVAT./DEACTIVATION CONTROLS

Connections vehicle/art. 3800

Art.3800	Vehicle	Position
GREY/BLACK	GREEN (dir.indicator)	Pos. nr.6 (direction indicator connector)
YELLOW/BLACK	ground	Car body
VIOLET/WHITE	ground	Car body
ORANGE	BROWN 1,5 mm ²	Motor control of door of fuel tank
VIOLET	*GREEN 1,5 mm ²	* Motor control of door of fuel tank
ORANGE/WHITE	ground	Car body

Note: to carry out the autolerning of the activation and deactivation controls of the antitheft, it is necessary:

- to connect the BLUE wire directly at ground and wait the switch off of the rear lamp (after the programming connect it to the PINK wire of the boot).
- Lock mechanically the locking of the boot (with the boot opened the direction indicators from original tx do not flash).

IMMOBILISATION POINT

Ignition immobilisation

Cut the ORANGE wire, at the position nr.1, of the 4 way black connector coming out of the starting button located at the right of the steering wheel.

BONNET SWITCH

Install an additional switch on the front headlamp support plate, driver's side.

DOORS SWITCH

Connect to the WHITE wire, at the position nr.2, of the connector coming out of the rear lamps.

BOOT SWITCH

Connect to the PINK wire, at the position nr. 2, of the wiring harness coming out of the boot lamp.