



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE	RENAULT	MOD.	LAGUNA	YEAR	98 →	PETROL	<input type="checkbox"/>	DIESEL	<input checked="" type="checkbox"/>
ALARM/SIREN POSITION	Position the compact alarms and the sirens on the left of the engine compartment, on the lateral panel.								
POWER SUPPLY	+ 30: connect to the 4 mm ² RED wire located in the general power supply multiway connector of the fuse box. - 31: connect with a cable terminal to one of the ground terminals located behind the lateral panel, driver's side.								
IGNITION WIRE	+ 15/54: connect to the wire at the position A1 (the first on the right of the little fastons) of the 1st connector on the left, coming out of the central doors locking unit located on the left of the dashboard, driver's side.								
DIRECTION INDICATORS	Connect to the VIOLET/WHITE wire at the position nr. A7 and to the GREEN wire at the position A5 of the connector coming out of the lights switch.								
ELECTRIC WINDOWS	Positive control signal Front window, driver's side: cut the GREY wire at the position B5 of the 9 way black connector located inside the driver's side door. Front window, passenger's side: cut the WHITE wire located in the wiring harness coming out of the driver's side door. Rear window, driver's side: cut the WHITE/BLACK wire coming out of the respective control switch. Rear window, passenger's side: cut the WHITE/RED wire directly coming out of the respective control switch. The wires are in the wiring harness coming out of the respective switches.								
CENTRAL DOORS LOCKING	Negative control signal Connect to the ORANGE wire (lock) and to the VIOLET wire (unlock) located in the wiring harness coming out of the connector of the original lock/unlock switch. Alternatively connect the same wires at the positions B2 and B1 in the wiring harness coming out of the 13 way black connector of the central doors locking unit under the dashboard, driver's side.								
IMMOBILISATION POINT	Gasoil pump Cut the YELLOW wire located at the position nr. 2 of the brown connector, near the fuse box.								
BONNET SWITCH	Install an additional switch on the front headlamp support plate, near the original rubber bonnet stop.								
DOORS SWITCH	Connect to the 0,5 mm ² BROWN wire located at the position nr.4 of the connector marked R2 coming out of the left support, driver's side.								
BOOT SWITCH	Connect directly to the wire of the boot lamp coming out of the same.								