

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 02

SPECIFIC VEHICLE ALARMI FITTING INSTRUCTIONS REV. 02 www.cobra.it				
	MOD.	SCENIC*	YEAR. 01 ®	PETROL 🗵 DIESEL 🗌
* Models with original equipment keyless entry system.				
ALARM/SIREN	Position the compa	ot alarma and the airon	a on the support of the	chack abcorbor in
POSITION	the engine compart	ment, driver's side. Pa	is on the support of the ss the cables using the d that divides the engin	original rubber core
CENTRAL UNIT POSITION	Position the modular systems and the modules under the dashboard, driver's side.			
POWER SUPPLY	 + 30: connect to the 4 mm² RED/WHITE wire located in the multiway connector, in the fuse box. - 31: connect with a cable terminal directly to the car body. 			
IGNITION WIRE	+ 15/54: connect to the YELLOW/VIOLET wire, at the position nr. 3, of the connector marked "PP1", in the fuse box.			
DIRECTION INDICATORS	Connect to the LIGHT BROWN wire at the position nr. 4 and to the ORANGE wire at the position nr. 8 located in the connector marked PP2, behind the fuse box, under the dashboard, driver's side.			
ELECTRIC WINDOWS	Mixed control signals (Art. 2980) Front window, driver's side: cut the 1,5 mm ² LIGHT BROWN wire (positive) Front window, passenger's side: cut both the 2 mm ² BROWN/RED wire (positive) and the YELLOW/RED wire (negative) located in the wiring harness coming out of the driver's side door.			
ACTIVAT./DEACTIVATION	Connections antitheft/vehicle			
CONTROLS	Art.3800	Vehicle	Position	
	YELLOW/BLACK	GREEN/ORANGE	coming out central do Pos. 6, PP1.	oors locking unit
	GREY/BLACK	WHITE/ORANGE	coming out central de Pos. 5, PP1.	oors locking unit
	VIOLET	LIGHT BROWN	connector PP2 in the Pos. 4.	fuse box (BLK)
	ORANGE	ground	car body	
	VIOLET/WHITE	ground	car body	
	ORANGE/WHITE ground car body Refer to diagram nr.103.			
IMMOBILISATION POINT	Fuel pump Cut the WHITE wire located near the YELLOW/VIOLET wire (+15/54) of the connector marked PP3 in the fuse box.			
STARTER	+50: Cut the WHITE wire located at the position nr. 6 of the wiring harness coming out of the 6 way black connector, under the steering column.			
BONNET SWITCH	Install an additional switch on the front headlamp support plate, driver's side.			
DOORS AND BOOT SWITCH	Connect to the BROWN wire, at the position nr. 9, in the 15 way PE4 grey connector coming out of the central, located under the dashboard, driver's side.			

