

CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

www.cobra.it

MAKE RENAULT

MOD.

SCENIC

YEAR

02 →

PETROL DIESEL <u>x</u>

REV. 00

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the right of the bulkhead that divides the engine compartment from the passenger's compartment. To pass the cables

make a hole near the shock absorber, driver's side.

CENTRAL UNIT POSITION The modular systems and the modules should be positioned under the dashboard,

driver's side.

POWER SUPPLY + 30: connect to the RED/BLACK wire located at the position nr.11 of the connector

marked PP5, in the fuse box.

- 31: connect with a cable terminal directly to the car body.

IGNITION WIRE + 15/54: connect to the YELLOW/VIOLET wire located at the position nr. 3 of the

connector marked PP1, in the fuse box.

DIRECTION INDICATORS Connect to the LIGHT BROWN wire, at the position nr. 4, and to the ORANGE wire,

at the position nr. 8, in the connector marked PP2, behind the fuse box, under the

driver's side dashboard.

ELECTRIC WINDOWS Mixed control signals (Art. 2980)

Front window, driver's side:

cut the 1,5 mm² LIGHT BROWN wire (positive).

Front window, passenger's side:

cut both the 2 mm² BROWN/RED wire (positive) and the YELLOW/RED wire (negative). Connections must be done in the wiring harness coming out of the

connector of the driver's side door.

CENTRAL DOORS LOCKING Negative control signal

Connect to the VIOLET wire at the position nr. 5 (lock) and to the PINK wire at the

position nr. 6 (unlock), located in the connector marked PE4, in the fuse box.

IMMOBILISATION POINT Fuel pump

Cut the WHITE wire located near the YELLOW/VIOLET wire (+15/54) of the

connector marked PP1, in the fuse box.

STARTER +50 : Cut the WHITE wire, at the position nr. 6, in the wiring harness coming out of

the 6 way black connector, located under the steering column.

BONNET SWITCH Install an additional switch on the front headlamp plate, driver's side.

DOORS SWITCH Connect to the GREY wire located at the position nr. 8, of the connector marked

PE4, in the fuse box.

BOOT SWITCH Connect to the BROWN wire located at the position nr. 9, of the connector marked

PE4, in the fuse box.