



**SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS**

**REV. 00**

www.cobra.it

MAKE **RENAULT** MOD. **TRAFIC\*** YEAR **03** → PETROL  DIESEL

\* Vers. with original equipment keyless entry system.

- ALARM/SIREN POSITION** Position the compact alarms and the sirens behind the passenger's side headlamp.
- CENTRAL UNIT POSITION** The modular systems and the modules should be positioned under the dashboard, driver's side.
- POWER SUPPLY**
  - +30:** connect to the position B1 in the connector marked P202 in the locking central unit located behind the steering column.
  - 31:** connect to the position B9 in the connector marked P202 in the locking central unit located behind the steering column.
- IGNITION WIRE** **+15/54:** connect to the position B3 in the connector marked P202 in the locking central unit located behind the steering column.
- DIRECTION INDICATORS** Connect to the PINK wire at the position A3, and to the VIOLET wire at the position A4, in the connector marked P202, in the central locking unit placed behind the steering column.
- ELECTRIC WINDOWS**
  - Positive control signal**
  - Front window, driver's side:**  
Cut the WHITE wire at the position B5, in the 9 way black connector, in the windows operating central inside the driver's side door.
  - Front window, passenger's side:**  
Cut the WHITE wire at the position A1, in the 12 way black connector, in the serial push-button panel in the driver's side door.
- ACTIVAT./DEACTIVATION CONTROLS**

Art.3800	Vehicle	Position
YELLOW/BLACK	GREY	Pos. A6 in the connector marked P202
GREY/BLACK	WHITE	Pos. A9 in the connector marked P202
VIOLET	GREEN	Pos. 13 in the connector marked P201
ORANGE	PINK	Pos. 14 in the connector marked P201
VIOLET/WHITE	ground	car body
ORANGE/WHITE	positive	power supply in the fuse box

The connectors marked P201 and P202 are located in the central behind the steering column. Refer to the "C" diagram in the dedicated installations manual in the kit of the antitheft.
- IMMOBILISATION POINT** **Fuel pump**  
Cut the YELLOW wire at the position nr.29 located in the white connector of the central located on the right of the steering column, above the passenger's side glove compartment.
- STARTER** **+50:** Cut the WHITE wire, in the wiring harness coming out of the ignition key.
- BONNET SWITCH** Install an additional switch on the front headlamp plate, driver's side.
- FRONT DOORS SWITCH** Connect to the GREEN wire, at the position nr. 27, in the connector marked P 201, in the central locking unit placed behind the steering column.
- BOOT AND LATERAL DOOR SWITCH** Connect to the VIOLET wire, at the position nr. 23, in the connector marked P201, in the central locking unit placed behind the steering column.